



SigmaPAT
MI 3310
Instruction Manual
Version: 1.0, Code no. 20 751 672

Distributor:

Manufacturer:

Metrel d.d.
Ljubljanska cesta 77
SI-1354 Horjul
E-mail: metrel@metrel.si
<http://www.metrel.si>

© 2010 Metrel



Mark on your equipment certifies that this equipment meets the requirements of the EU (European Union) regulations concerning safety and electromagnetic compatibility

No part of this publication may be reproduced or utilized in any form or by any means without permission in writing from METREL.

1	General description	6
1.1	Warnings	7
1.2	Warning markings on connector panel	7
1.3	Standards applied	7
1.4	Battery and charging	9
1.5	New battery cells or cells unused for a longer period	9
2	Instrument description	11
2.1	Front panel	11
2.2	Connector panels	12
2.3	Safety pre-tests	13
2.4	Warnings, messages and symbols	14
	<i>Warnings and messages</i>	<i>14</i>
	<i>Warning symbols</i>	<i>17</i>
	<i>PASS /FAIL indication</i>	<i>17</i>
	<i>Battery and mains supply indication</i>	<i>18</i>
	<i>Bluetooth indication (optional)</i>	<i>18</i>
3	Technical specifications.....	19
3.1	Earth bond resistance.....	19
3.2	Insulation resistance, Insulation – S probe resistance.....	19
3.3	Subleakage current, Subleakage – S probe current.....	20
3.4	Differential leakage current.....	20
3.5	Power / Functional test.....	21
3.6	Touch leakage current.....	21
3.7	Polarity test.....	22
3.8	Clamp current.....	22
3.9	PRCD and RCD testing.....	22
	3.9.1 <i>Portable RCD trip-out time</i>	<i>22</i>
	3.9.2 <i>General RCD Trip-out time.....</i>	<i>23</i>
3.10	General data.....	24
4	Main menu and test modes	26
4.1	Help menus	26
4.2	Instrument main menu.....	27
	4.2.1 <i>Autotest shortcut menu</i>	<i>27</i>
	4.2.2 <i>Autotest custom menu.....</i>	<i>28</i>
	4.2.3 <i>Project autotests menu.....</i>	<i>28</i>
	4.2.4 <i>Single test menu.....</i>	<i>29</i>
	4.2.5 <i>User / appliance data menu</i>	<i>29</i>
	4.2.5.1 Users submenu	30
	4.2.5.1.1 <i>Name editing menu.....</i>	<i>30</i>
	4.2.5.2 Device submenu	31
	4.2.5.3 Test sites submenu	31
	4.2.5.4 Locations submenu	32
	4.2.6 <i>Recall / delete / send results menu</i>	<i>32</i>
	4.2.7 <i>Data upload / download menu.....</i>	<i>33</i>
	4.2.8 <i>Setup menu.....</i>	<i>33</i>
	4.2.8.1 Setting date and time	34
	4.2.8.2 Language selection	34

4.2.8.3	Print header.....	35
4.2.8.4	Viewing of instrument data.....	36
4.2.8.5	Display contrast adjustment.....	36
4.2.8.6	Instrument settings.....	37
4.2.8.7	Reset instrument settings.....	38
4.2.8.8	Communication settings.....	38
4.2.8.9	Wireless communication setup (optional).....	40
4.2.8.10	Password.....	41
5	Single tests.....	43
5.1	Performing measurements in single test mode.....	43
5.2	Measurements.....	44
5.2.1	<i>Earth bond resistance</i>	44
5.2.2	<i>Insulation resistance</i>	45
5.2.3	<i>Insulation resistance - S</i>	47
5.2.4	<i>Substitute leakage current</i>	49
5.2.5	<i>Substitute leakage - S</i>	51
5.2.6	<i>Differential leakage current</i>	53
5.2.7	<i>Touch leakage current</i>	55
5.2.8	<i>Polarity test</i>	57
5.2.9	<i>Clamp current test</i>	59
5.2.10	<i>RCD/PRCD test</i>	61
5.2.10.1	RCD single test.....	62
5.2.10.2	Automatic RCD test.....	63
5.2.11	<i>Functional test</i>	64
6	Autotest sequences.....	67
6.1	Shortcut to autotests.....	67
6.1.1	<i>Selecting the autotest shortcut sequence</i>	67
6.1.2	<i>Viewing autotest shortcut sequence measurement parameters</i>	68
6.2	Custom autotests.....	69
6.2.1	<i>Viewing, modifying and saving an custom autotest</i>	69
6.2.1.1	Modification of an autotest sequence.....	70
6.2.1.2	Saving autotest sequences.....	71
6.2.2	<i>Deleting an existing custom test sequence</i>	71
6.3	Project autotests.....	73
6.3.1	<i>Selecting a project autotest</i>	73
6.3.2	<i>Starting a project autotest</i>	76
6.3.3	<i>Comparison of results (evaluation of result trends)</i>	76
6.4	Working with barcode reader.....	79
6.4.1	<i>Reading barcode for autotest</i>	79
6.4.2	<i>Reading barcode for working with results</i>	80
6.5	Performing autotest sequences.....	81
6.5.1	<i>Visual inspection</i>	81
6.5.2	<i>Earth bond resistance measurement</i>	82
6.5.3	<i>Insulation resistance measurement</i>	83
6.5.4	<i>Insulation resistance – S probe measurement</i>	83
6.5.5	<i>Substitute leakage current measurement</i>	84
6.5.6	<i>Substitute leakage – S probe measurement</i>	85
6.5.7	<i>Differential leakage current</i>	85
6.5.8	<i>Touch leakage current measurement</i>	86

6.5.9	<i>Polarity test</i>	87
6.5.10	<i>TRMS current measurement using clamp current adapter</i>	87
6.5.11	<i>RCD/PRCD test</i>	88
6.5.12	<i>Power/ Functional test</i>	88
7	Working with autotest results	90
7.1	Saving autotest results	90
7.2	Recalling results	91
7.3	Deleting results.....	93
7.4	Downloading and printing results	94
7.4.1	<i>Send to barcode printer</i>	96
7.5	Data upload / download.....	96
8	Maintenance	97
8.1	Periodic calibration	97
8.2	Fuses.....	97
8.3	Service	97
8.4	Cleaning	97
9	Instrument set and accessories	98
A	Appendix A – Preprogrammed autotests	99
B	Appendix B – Autotest shortcut codes	106

1 General description

The multifunctional portable test instrument SigmaPAT is intended to perform all measurements for testing the electrical safety of portable electrical equipment. The following tests can be performed:

- Earth bond / continuity resistance,
- Insulation resistance,
- Insulation resistance of isolated accessible conductive parts,
- Substitute leakage current,
- Substitute leakage current of isolated accessible conductive parts,
- Differential leakage current,
- Touch leakage current,
- IEC cord polarity test,
- Leakage and TRMS load currents with current clamp,
- Portable RCD test,
- RCD test,
- Functional test.

The instrument has a powerful test data management system. Autotests and single tests can be stored (depending on the application) in approx. 6000 memory locations.

Some instrument's highlights:

- Large graphic LCD display with resolution of 240×128 dots, with back-light,
- Over 6000 memory locations in data flash memory for storing test results & parameters,
- Three communication ports (USB and 2 x RS232C) for communication with PC, barcode reader and printers,
- Optional Bluetooth communication with external printer and barcode reader,
- Soft touch keyboard with cursor keys,
- Built in real time clock,
- Fully compatible with new METREL PATLink PRO PC software package.



Powerful functions for fast and efficient periodic testing are included:

- Pre-programmed test sequences,
- Fast testing with barcode identification systems,
- Test data can be uploaded from PC,
- Comparisons between old and new test results can be performed on site,
- Enables on site printing of test labels.

The operation of the unit is clear and simple – the operator does not need any special training (except reading this instruction manual) to operate the instrument.

1.1 Warnings

In order to reach high level of operator safety while carrying out various measurements using SigmaPAT instrument, as well as to keep the test equipment undamaged, it is necessary to consider the following general warnings:

- **Read this user manual carefully, otherwise use of the instrument may be dangerous for the operator, for the instrument or for the equipment under test!**
-  **Warning on the instrument means »Read the Instruction manual with special care to safety operation«. The symbol requires an action!**
- **If the test equipment is used in manner not specified in this user manual the protection provided by the equipment may be impaired!**
- **Do not use the instrument and accessories if any damage is noticed!**
- **Consider all generally known precautions in order to avoid risk of electric shock while dealing with hazardous voltages!**
- **Do not use the instrument in supply systems with voltages higher than CAT II 300 V!**
- **Use only standard or optional test accessories supplied by your distributor!**
- **Use only correctly earthed mains outlets to supply the instrument!**
- **In case a fuse has blown follow the instructions in this user manual to replace it!**
- **Instrument servicing and calibration is allowed to be carried out only by a competent authorized person!**
-  **It is advisable not to run tested devices with load currents above 13 A for more than 15 minutes. Load currents higher than 13 A can result in high temperatures of main supply connector and fuse holders!**
- **Instrument contains rechargeable NiCd or NiMh battery cells. The cells should only be replaced with the same type as defined on the battery placement label or in this manual. Do not use standard alkaline battery cells while power supply cable is connected, otherwise they may explode!**
- **If a test code with an earth bond test current not supported by the instrument is selected the SigmaPAT instrument will automatically perform the earth bond test with lower test current (200 mA or 10 A). The operator must be competent to decide if performing the test with lower test current is acceptable!**

1.2 Warning markings on connector panel

Refer to chapters *2.1 Front panel* and *2.2 Connector panels*.

1.3 Standards applied

The SigmaPAT instrument is manufactured and tested according to the following regulations, listed below.

Electromagnetic compatibility (EMC)

EN 61326-1	Electrical equipment for measurement, control and laboratory use - EMC requirements -- Part 1: General requirements Class B (Portable equipment used in controlled EM environments)
------------	--

Safety (LVD)

EN 61010-1	Safety requirements for electrical equipment for measurement, control, and laboratory use – Part 1: General requirements
EN 61010-031	Safety requirements for electrical equipment for measurement, control and laboratory use - Part 031: Safety requirements for hand-held probe assemblies for electrical measurement and test
EN 61010-2-032	Safety requirements for electrical equipment for measurement, control, and laboratory use - Part 2-032: Particular requirements for hand-held and hand-manipulated current sensors for electrical test and measurement

Functionality

VDE 0404-1	Testing and measuring equipment for checking the electric safety of electric devices - Part 1: General requirements
VDE 0404-2	Testing and measuring equipment for checking the electric safety of electric devices - Part 2: Testing equipment for tests after repair, change or in the case of repeat tests
VDE 0701-0702	Inspection after repair, modification of electrical appliances – Periodic inspection on electrical appliances General requirements for electrical safety
EN 60204-1 Ed.5	Safety of machinery - Electrical equipment of machines - Part 1: General requirements
EN 60439	Low-voltage switchgear and controlgear assemblies
EN 61439-1	Low-voltage switchgear and controlgear assemblies - Part 1: General rules
AS / NZS 3760	In-service safety inspection and testing of electrical equipment
NEN 3140	Operation of electrical installations - Additional Netherlands requirements for low-voltage installations

Note about EN and IEC standards:

Text of this manual contains references to European standards. All standards of EN 6xxxx (e.g. EN 61010) series are equivalent to IEC standards with the same number (e.g. IEC 61010) and differ only in amended parts required by European harmonization procedure.

Notes:

Various devices and appliances can be tested by SigmaPAT and in further text the common DUT (abbreviation for Device Under Test) is applied.

1.4 Battery and charging

The instrument uses six C size alkaline or rechargeable Ni-Cd or Ni-MH battery cells. Battery condition is always displayed in the lower right display part. In case the battery is too weak the instrument indicates this as shown in below. This indication appears for a few seconds and then the instrument turns itself off.



Discharged battery indication

The battery is charged whenever the instrument is connected to mains voltage. The instrument automatically recognizes the connection to the mains voltage and begins charging. Internal circuit controls charging and assures maximum battery lifetime.



Indications of battery charging

- ❑ **⚠ When connected to an installation, the instruments battery compartment can contain hazardous voltage inside! Before opening battery compartment cover, disconnect all accessories connected to the instrument and switch off the instrument.**
- ❑ **Ensure that the battery cells are inserted correctly otherwise the instrument will not operate and the batteries could be discharged.**
- ❑ **If the instrument is not to be used for a long period of time, remove all batteries from the battery compartment.**
- ❑ **Alkaline or rechargeable Ni-Cd or Ni-MH batteries (size C) can be used. Metrel recommends only using rechargeable batteries with a capacity of 4000 mAh or higher.**
- ❑ **Do not recharge alkaline battery cells!**

1.5 New battery cells or cells unused for a longer period

Unpredictable chemical processes can occur during the charging of new battery cells or cells that have been left unused for a longer period (more than 3 months). Ni-MH and Ni-Cd cells can be subjected to these chemical effects (sometimes called the memory effect). As a result the instrument operation time can be significantly reduced during the initial charging/discharging cycles of the batteries.

In this situation, Metrel recommend the following procedure to improve the battery lifetime:

Procedure	Notes
❑ Completely charge the battery.	At least 14h with in-built charger.
❑ Completely discharge the battery.	This can be performed by using the instrument normally, until the instrument is

	fully discharged.
❑ Repeat the charge / discharge cycle at least 2-4 times.	Four cycles are recommended in order to restore the batteries to their normal capacity.


Note:

- ❑ The charger in the instrument is a pack cell charger. This means that the battery cells are connected in series during the charging. The battery cells have to be equivalent (same charge condition, same type and age).
- ❑ One different battery cell can cause an improper charging and incorrect discharging during normal usage of the entire battery pack (it results in heating of the battery pack, significantly decreased operation time, reversed polarity of defective cell...).
- ❑ If no improvement is achieved after several charge / discharge cycles, then each battery cell should be checked (by comparing battery voltages, testing them in a cell charger, etc). It is very likely that only some of the battery cells are deteriorated.

The effects described above should not be confused with the normal decrease of battery capacity over time. Battery also loses some capacity when it is repeatedly charged / discharged. Actual decreasing of capacity, versus number of charging cycles, depends on battery type. This information is provided in the technical specification from battery manufacturer.

2 Instrument description

2.1 Front panel

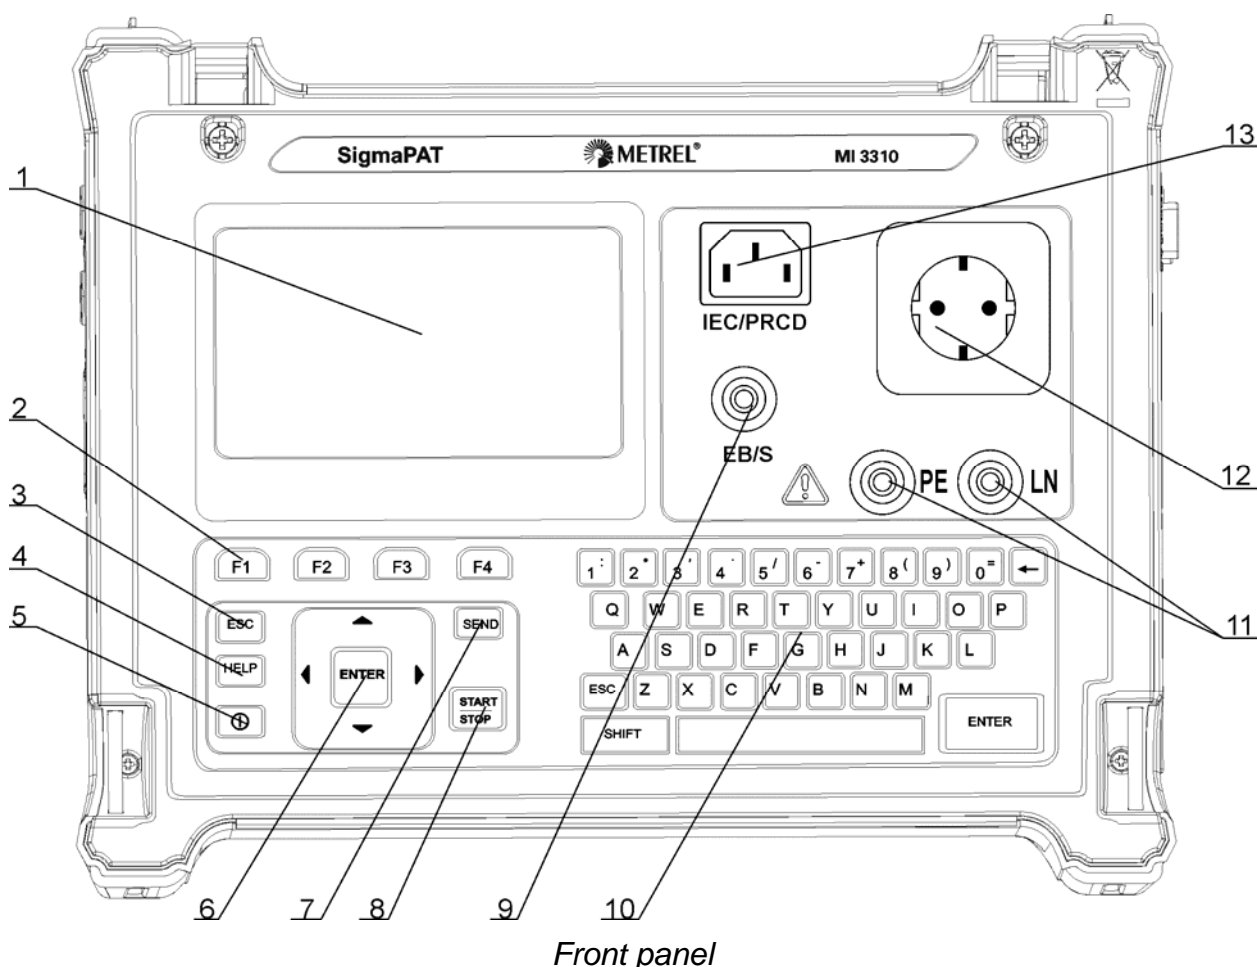

Legend:

- | | |
|----|---|
| 1 | 240 × 128 dots graphic matrix display with backlight |
| 2 | Function keys intended for displayed defined options. |
| 3 | ESCAPE key |
| 4 | HELP key |
| 5 | ON / OFF key |
| 6 | Cursor keys and ENTER key |
| 7 | SEND key |
| 8 | START / STOP key |
| 9 | Test probe EB/S, used as output for earth bond test and probe input in for class 2 equipment tests (insulation resistance – S, substitute leakage – S, and touch leakage currents). |
| 10 | Alpha-numeric keyboard |
| 11 | LN and PE sockets for testing the insulation resistance and substitute leakage current of fixed installed DUTs. |

Warning!

- ❑ These sockets are intended only for the connection to deenergized devices.

12 Test socket

Warning!

- ❑ Dangerous voltage is present on the test socket during the measurement. Maximum output current is 16 A, test only devices with maximum rated supply current not higher than 16 A!

Note:


- ❑ For devices incorporated high reactive loading, e.g. motor with rated power > 1.5 kW, it is recommended to start measurement first and to turn on the tested device later.

13 IEC appliance connector for testing supply cords


Warning!

- ❑ The connector input is for test purpose only; do not connect it to the mains supply!

2.2 Connector panels

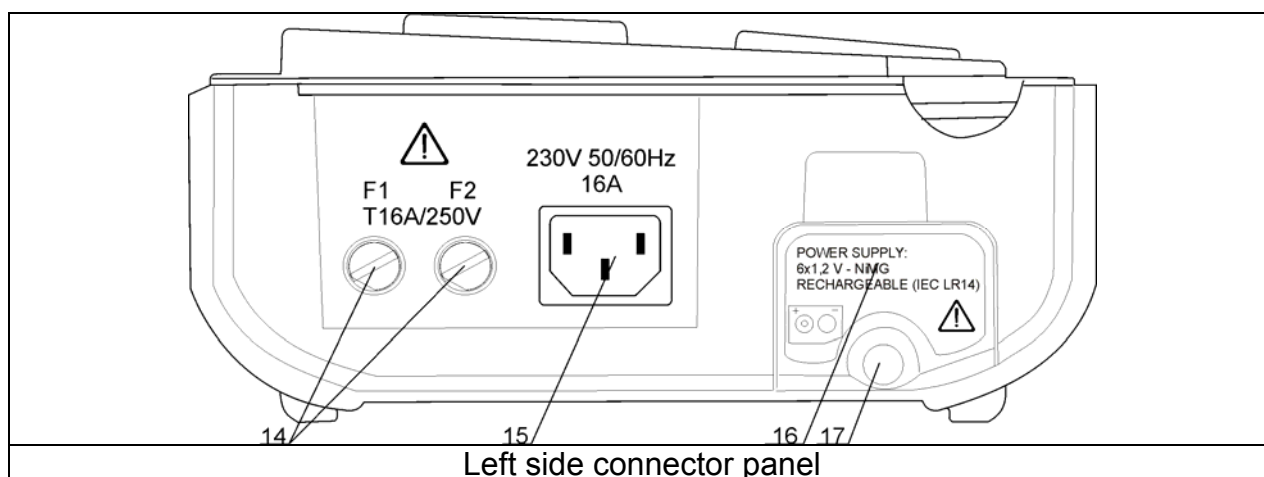

14	Two T16 A / 250 V fuses for instrument protection
15	Mains supply connector
16	Battery compartment cover
17	Fastening screw for battery compartment cover
	Warning!
	❑ Disconnect all accessory and tested equipment before opening the battery cover!

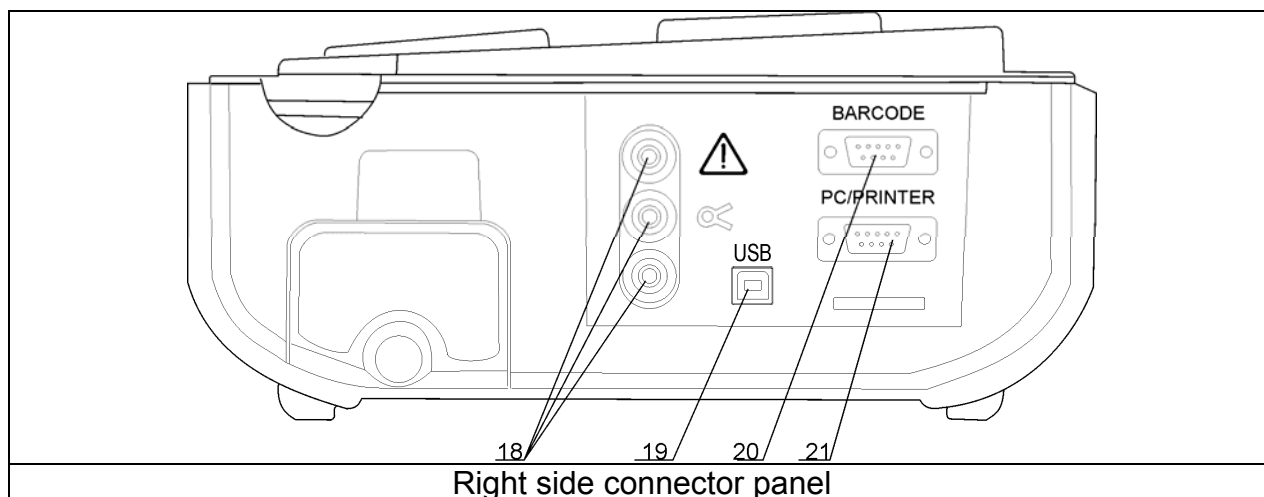

18	<p>Current clamp adapter input sockets</p> <p>Warnings!</p> <ul style="list-style-type: none"> <input type="checkbox"/> Do not connect any voltage source on this input. It is intended only for connection of current clamp with current output. Maximum input current is 30 mA! <input type="checkbox"/> Green socket is connected to the functional earth of the system and is intended for connection with shield of current clamp only.
19	USB connector
20	Barcode reader connector
21	PC / PRINTER connector

2.3 Safety pre-tests

Before performing a measurement, the instrument performs a series of pre-tests to ensure safety and to prevent any damage. These safety pre-tests are checking for:

- Any external voltage against earth on mains test socket,
- Excessively high leakage current,
- Excessively high touch leakage current,
- Short circuit or too low resistance between L and N of tested device,
- Correct input mains voltage,
- Input PE connection.

If pre-tests fail, an appropriate warning message will be displayed.

The warnings and measures are described in chapter 2.4 *Warnings, messages and symbols*.

2.4 Warnings, messages and symbols

Warnings and messages

<p>Mains voltage is not correct or PE not connected. Check mains voltage and PE connection!</p>	<p>Warning for improper supply voltage condition. Possible causes:</p> <ul style="list-style-type: none"> - No earth connection or other wiring problem on supply socket. - Incorrect mains voltage. <p>Determine and eliminate the problem before proceeding! Warning:</p> <ul style="list-style-type: none"> - The instrument must be earthed properly!
<p>No mains voltage. Connect PAT to mains voltage.</p>	<p>Instrument not connected to the mains supply voltage. For some measurements like differential / touch leakage tests, PRCD / RCD tests and active polarity, operating the instrument from mains voltage is required. Connect the instrument to the mains voltage and start selected test again.</p>
<p>L – N resistance too high (>30 kΩ)! Check fuse and switch. Are you sure to proceed (Y/N)?</p>	<p>An excessively high resistance was measured in the fuse pre-test. Indication means that tested device has too low consumption or is:</p> <ul style="list-style-type: none"> - Not connected, - Switched off, - Contains a fuse that has blown. <p>Select YES or NO with Y or N key.</p>
<p>Resistance L – N low! Are you sure to proceed (Y/N)?</p>	<p>A low resistance of the device under test (DUT) supply input was measured in the pre-test. This means that it is very likely that an excessively high current will flow after applying power to the DUT. If the high current is only of short duration (caused by a short inrush current) the test can be performed, otherwise not. Select YES or NO with Y or N key.</p>
<p>Resistance L – N too low! Are you sure to proceed (Y/N)?</p>	<p>An extremely low resistance of the DUT supply input was measured in the pre-test. It is likely that fuses will blow after applying power to the DUT. If the too high current is only of short duration (caused by a short inrush current) the test can be performed otherwise it must be stopped. Select YES or NO with Y or N key. It is recommended to additionally check the DUT before proceeding with the test!</p>

<p>Leakage LN-PE high!</p> <p>Are you sure to proceed (Y/N)?</p>	<p>Dangerous leakage current (higher than 3.5 mA) will flow if power would be connected to DUT. Select YES or NO with Y or N key. Proceed with testing only if all safety measures have been taken. It is recommended to perform a thorough earth bond test on the PE of the DUT before proceeding with the test.</p>
<p>Leakage LN-PE too high!</p> <p>Are you sure to proceed (Y/N)?</p>	<p>Dangerous leakage current (higher than 20 mA) will flow if power would be connected to the DUT. Determine and eliminate the problem before proceeding!</p>
<p>Leakage LN-PE or EB/S too high!</p> <p>Are you sure to proceed (Y/N)?</p>	<p>Dangerous leakage current (higher than 20 mA) would flow if power were connected to the DUT. Select YES or NO with Y or N key. Proceed with testing only if all safety measures have been taken. It is recommended to perform a thorough earth bond test on the PE of the DUT before proceeding with the test.</p>
<p>External voltage on test socket too high!</p>	<p>DANGER!</p> <ul style="list-style-type: none"> - Voltage on mains test socket or LN/PE terminals is higher than approximately 25 V (AC or DC)! <p>Disconnect the DUT from the instrument immediately and determine why external voltage was detected!</p>
<p>External voltage on EB/S too high!</p>	<p>DANGER!</p> <ul style="list-style-type: none"> - Voltage on test probe (EB/S) is higher than approximately 25 V (AC or DC)! <p>Disconnect the test probe from the DUT and determine why external voltage was detected!</p>
<p>Next tests were skipped for safety!</p> <p>Check the device.</p>	<p>Instrument skipped the required test because of a failed previous test.</p>
<p>Overheated!</p>	<p>Temperature of internal components of the instrument reached their top limit. Measurement is prohibited until the internal temperature has reduced.</p>

Warning!
More than 80 % of
memory is occupied.
Stored data should be
downloaded to PC.

Instrument memory is almost full. Download stored results to PC.

Warning!
Calibration has been
expired.

Recalibration of the instrument is required. Contact your dealer.









Measurement aborted,
contact voltage too
high (> 50V).

A too high contact voltage was detected before an RCD test being carried out. Check PE connections!




Hardware error.
Return the instrument
to the repair centre.

The instrument detects a serious failure.

Warning symbols

	Remove the EB/S connection, especially if it is connected to any part that will begin to rotate or move when power is applied.
	Connect the test lead to the EB/S test socket.
  	Warning! A high voltage is / will be present on the instrument output! (Insulation test voltage, or mains voltage).
	The DUT should be switched on (to ensure that the complete circuit is tested).
	Connect the lead to be tested to the IEC test terminal.
	Connect current clamp adapter in this test.

PASS /FAIL indication

	Test passed.
	Test failed.
	Some tests in the autotest sequence were skipped, but all performed tests passed.

Battery and mains supply indication



Battery capacity indication.



Low battery! Battery is too weak to guarantee correct result. Replace or recharge battery cells.



Instrument connected to the mains supply voltage. When instrument is in idle mode recharging process is in progress.



Recharging in progress (if instrument is connected to the mains supply voltage).

Bluetooth indication (optional)



Bluetooth communication is enabled. Remote device (printer or barcode reader) can now be connected with the instrument.



Remote Bluetooth device (printer or barcode reader) is connected with the instrument.



Searching for Bluetooth devices or connecting procedure with the selected Bluetooth device (printer or barcode reader).

3 Technical specifications

3.1 Earth bond resistance

Earth bond resistance readout (test current set to 10 A, optional)

Range	Resolution	Accuracy
0.00 Ω ÷ 1.99 Ω	0.01 Ω	$\pm(5\%$ of reading + 3 digits)
2.00 Ω ÷ 19.99 Ω	0.01 Ω	$\pm 10\%$

Earth bond resistance readout (test current set to 200 mA)

Range	Resolution	Accuracy
0.00 Ω ÷ 1.99 Ω	0.01 Ω	$\pm(5\%$ of reading + 3 digits)
2.00 Ω ÷ 9.99 Ω	0.01 Ω	$\pm 10\%$
10.0 Ω ÷ 19.9 Ω	0.1 Ω	$\pm 10\%$

Powered by:..... battery or mains for 200 mA test
 Test currents:..... 10 A ($\pm 5\%$) into 100 m Ω at mains voltage of 230 V
 200 mA into 2.00 Ω
 Open circuit voltage: <9 V AC
 Lead calibration: no
 Pass levels [Ω]:..... 0.10 ÷ 0.90, 1.00 ÷ 9.00
 Test duration [s]:..... 2, 3, 5, 10, 30
 Test method:..... 2-wire measurement, floating to earth
 Test terminals: EB/S test probe – test socket (PE terminal)
 EB/S test probe – PE test probe (test current 200 mA only)

3.2 Insulation resistance, Insulation – S probe resistance

Insulation resistance

Range	Resolution	Accuracy
0.000 M Ω ÷ 0.500 M Ω	0.001 M Ω	$\pm(10\%$ of reading + 5 digits)
0.501 M Ω ÷ 1.999 M Ω	0.001 M Ω	$\pm(5\%$ of reading + 3 digits)
2.00 M Ω ÷ 19.99 M Ω	0.01 M Ω	
20.0 M Ω ÷ 199.9 M Ω	0.1 M Ω	

Insulation – S probe resistance

Range	Resolution	Accuracy
-------	------------	----------

0.000 M Ω ÷ 0.500 M Ω	0.001 M Ω	$\pm(10\%$ of reading + 5 digits)
0.501 M Ω ÷ 1.999 M Ω	0.001 M Ω	$\pm(5\%$ of reading + 3 digits)
2.00 M Ω ÷ 19.99 M Ω	0.01 M Ω	
20.0 M Ω ÷ 199.9 M Ω	0.1 M Ω	

Power by:..... battery or mains
Nominal voltages: 250 V DC, 500 V DC (- 0 %, + 10 %)
Measuring current:..... min. 1 mA at 250 k Ω (250 V), 500 k Ω (500 V)
Short circuit current:..... max. 2.0 mA
Pass levels [M Ω]:..... 0.01, 0.10, 0.25, 0.30, 0.50, 1.00, 2.00, 4.0, 7.0, 10.0, none
Test duration [s]:..... 2, 3, 5, 10, 30, 60, 120, 180 s, none

Test terminals: Insulation: Test socket (L+N) – test socket (PE)
LN test probe – PE test probe
LN test probe – EB/S test probe
Insulation – S: Test socket (L+N) – EB/S test probe
LN test probe – EB/S test probe

3.3 Subleakage current, Subleakage – S probe current

Range	Resolution	Accuracy
0.00 mA ÷ 19.99 mA	0.01 mA	$\pm(5\%$ of reading + 5 digits)

Powered by:..... battery or mains
Open circuit voltage: <50 V AC
Short circuit current:..... <40 mA
Measuring resistor: 2 k Ω
Pass levels [mA]: 0.25, 0.50, 0.75, 1.00, 1.50, 2.25, 2.50, 3.50, 4.0, 4.50, 5.00, 5.50, 6.00, 7.00, 8.00, 9.00, none
Test duration [s]:..... 2, 3, 5, 10, 30, 60, 120, 180, none
Displayed current:..... calculated to DUT nominal mains supply voltage
Test terminals: Sub leakage: Test socket (L+N) – test socket (PE)
LN test probe – PE test probe
LN test probe – EB/S test probe
Sub leakage – S: Test socket (L+N) – EB/S test probe
LN test probe – EB/S test probe

3.4 Differential leakage current

Differential leakage current

Range	Resolution	Accuracy
0.00 mA ÷ 9.99 mA	0.01 mA	$\pm(5\%$ of reading + 5 digits)

Powered by:..... mains
 Pass levels [mA]: 0.25, 0.50, 0.75, 1.00, 1.50, 2.25, 2.50, 3.50, 4.00, 4.50,
 Test duration [s]:..... 2 s, 3 s, 5 s, 10 s, 30 s, 60 s, 120 s, 180 s, none
 Frequency response: complies to EN61010-Figure A1

Test terminals:

Differential leakage	mains test socket
----------------------	-------------------

3.5 Power / Functional test

Apparent power

Range	Resolution	Accuracy
0.00 kVA ÷ 4.00 kVA	0.01 kVA	±(5 % of reading + 3 digits)

Powered by:..... mains
 Test duration [s]:..... 2 s, 3 s, 5 s, 10 s, 30 s, 60 s, 120 s, 180 s, none

Test terminals:

Power	mains test socket
-------	-------------------

3.6 Touch leakage current

Touch leakage current

Range	Resolution	Accuracy
0.00 mA ÷ 3.99 mA	0.01 mA	±(10 % of reading + 5 digits)

Powered by:.....mains
 Pass levels [mA]:0.25, 0.50, 0.75, 1.00, 1.50, 2.00, 3.50, none
 Test duration [s]:.....2, 3, 5, 10, 30, 60, 120, 180, none
 Output:.....test socket, test probe connector
 Impedance,
 Frequency response:complies to EN61010-Figure A1

Test terminals:

Touch leakage	mains test socket or external source/ S
---------------	---

3.7 Polarity test

Standard test

Powered by:.....mains, battery

Test voltage<50 V AC

Detects:Pass, L-open, N-open, PE-open, L-N crossed, L-PE crossed, N-PE crossed, L-N shorted, L-PE shorted, N-PE shorted, multiple faults

Test terminals:Mains test socket – IEC/PRCD test socket

Active test

Powered by:.....mains

Test voltageMains voltage, over-current protection > 150 mA

Detects:Pass, L-open, N-open, PE-fault, L-N crossed, connection fault

Test terminals:Mains test socket – IEC/PRCD test socket

3.8 Clamp current

True RMS current using 1000:1 current clamp

Range	Resolution	Accuracy*
0.00 mA ÷ 9.99 mA	0.01 mA	±(5 % of reading + 10 digits)
10.0 mA ÷ 99.9 mA	0.1 mA	±(5 % of reading + 5 digits)
100 mA ÷ 999 mA	1 mA	±(5 % of reading + 5 digits)
1.00 A ÷ 9.99 A	0.01 A	±(5 % of reading + 5 digits)
10.0 A ÷ 24.9 A	0.1 A	±(5 % of reading + 5 digits)

*It does not consider accuracy of current transformer.

Pass levels [mA]: 0.25, 0.50, 0.75, 1.00, 1.50, 2.25, 2.50, 3.00, 3.50, 5.00, 9.00, none

Test duration [s]: 2, 3, 5, 10, 30, 60, 120, 180, none

Powered by:..... battery or mains

Test terminals:

Clamp current	Clamp inputs
---------------	--------------

Temperature coefficient outside reference temperature limits is 1 % of measured value per °C

3.9 PRCD and RCD testing

3.9.1 Portable RCD trip-out time

Range	Resolution	Accuracy
0 ms ÷ 1999 ms ($\frac{1}{2} \times I_{\Delta N}$)	1 ms	±3 ms
0 ms ÷ 200 ms ($I_{\Delta N}$)	1 ms	
0 ms ÷ 40 ms ($5 \times I_{\Delta N}$)	1 ms	

Temperature range: -10 °C ÷ +60 °C
Maximum relative humidity: 90 % RH (-10 °C ÷ +40 °C)
80 % RH (40 °C ÷ 60 °C)

Accuracies apply for 1 year in reference conditions. Temperature coefficient outside these limits is 0.2 % of measured value per °C plus 1 digit, otherwise noted.

Fuses

Test socket protection:..... 2 x T16 A / 250 V, 6.3 × 32 mm

4 Main menu and test modes

The SigmaPAT instrument has a user-friendly manipulation. By pressing only a few keys most of the actions can be done. The menu tree of the instrument has been designed to be simple to understand and easy to operate.

The instrument can test appliances in four different modes:

- Single test mode,
- Three autotest modes.

After the instrument is switched on, the last menu used will be displayed.


4.1 Help menus

The measurement help menus are available in single and autotest modes. They can be accessed with the key HELP before the START key is pressed to initiate the measurement.

Help menus contain schematic diagrams for illustration of proper connection of DUT to the PAT testing instrument.

Keys in help menu:


PgUp (F1) / PgDown (F2)	Selects next / previous help screen.
ESC	Returns to the last test / measurement menu.

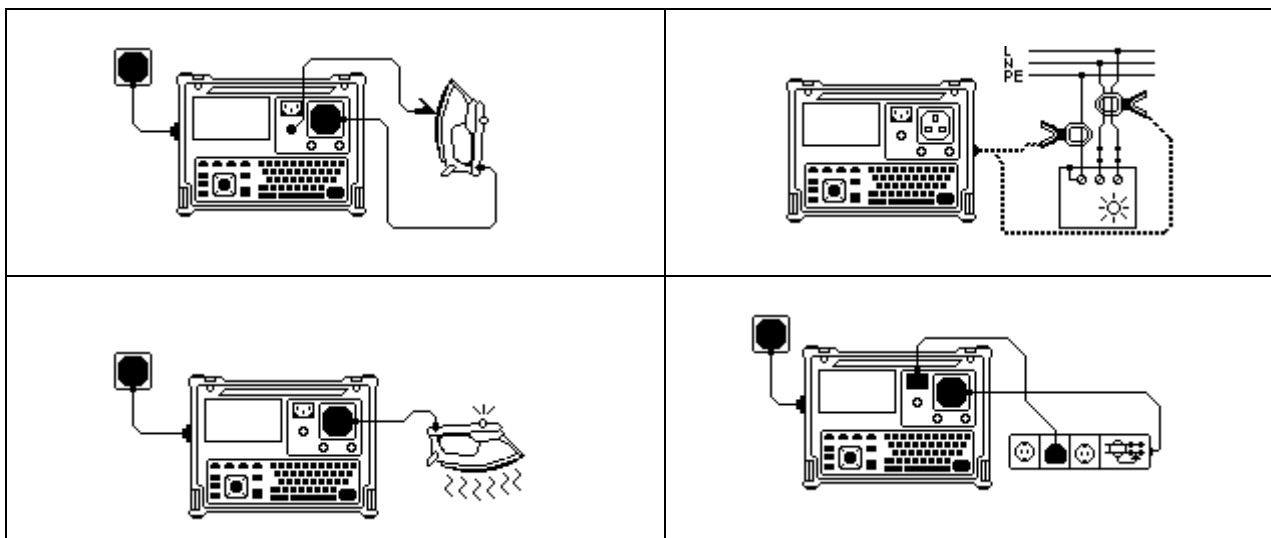

Example of help screens

4.2 Instrument main menu

From the **Main** menu all the instrument functions can be selected.

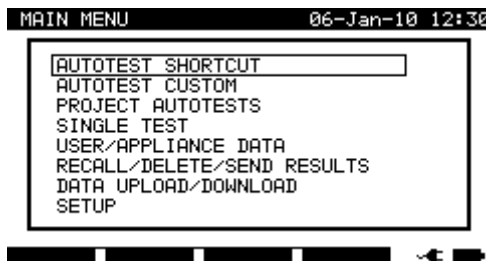

Instrument main menu

Keys in instrument main menu:

▲ / ▼	<p>Select one of the following menu items:</p> <p><AUTOTEST SHORTCUT>, pre-defined autosequences, see <i>chapter 4.2.1</i>;</p> <p><AUTOTEST CUSTOM>, custom prepared autosequences, see <i>chapter 4.2.2</i>;</p> <p><PROJECT AUTOTEST>, project autosequences, see <i>chapter 4.2.3</i>;</p> <p><SINGLE TEST>, test / measuring functions alone, see <i>chapter 4.2.4</i>;</p> <p><USER/APPLIANCE DATA>, see <i>chapter 4.2.5</i>;</p> <p><RECALL/DELETE/SEND RESULTS>, working with results, see <i>chapter 4.2.6</i>;</p> <p><DATA UPLOAD/DOWNLOAD>, data transfer possibilities, see <i>chapter 4.2.7</i>;</p> <p><SETUP> the menu for general settings of the instrument, see <i>chapter 4.2.8</i>.</p>
ENTER	Confirms selection.
ESC	Returns to the <i>Instrument main</i> menu.

Note:

- The ESC key must be pressed more than once to return to **Main** menu from any submenu or selected function.

4.2.1 Autotest shortcut menu

In this menu there are all the most popular pre-defined autotest sequences that can be selected and performed (shown in appendix A and B of this manual). When an autotest sequence has been completed, the measurement results can be stored into instrument flash memory or sent to the printer or PC for further processing.




Autotest shortcut menu examples

See chapter 6.1 *Shortcut to autotests* for detailed description of this test mode.

4.2.2 Autotest custom menu

The menu contains a list of custom prepared autosequences. 8 pre-programmed often used autotest sequences are added to the list by default. Up to 50 custom autotest sequences can be pre-programmed in this autotest mode. Custom autotests can be also downloaded to/ uploaded from the PC SW PATlinkPRO.

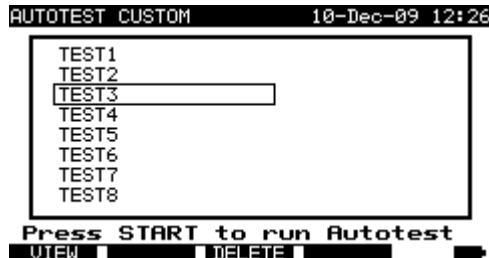


Autotest custom menu

See chapter 6.2 *Custom autotests* for detailed description about this test mode.

4.2.3 Project autotests menu

The Project autotest is a tool that simplifies and speeds up periodic testing of DUTs. The main idea is to re-use known and stored data about the DUT.

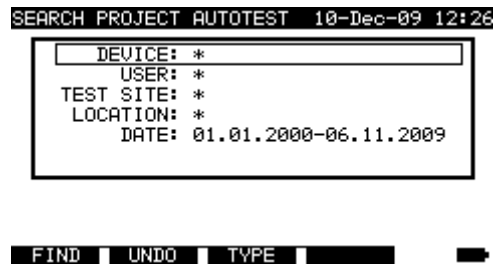


Project autotest starting menu example

See chapter 6.3 *Project autotests* for detailed description about this autotest mode.

4.2.4 Single test menu

In single test menu individual tests can be performed.

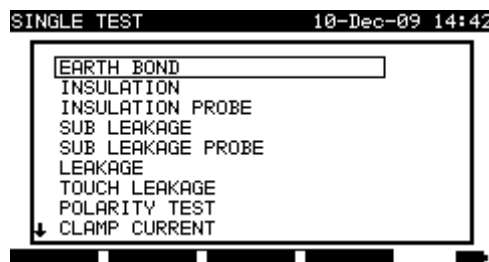


Single test menu

See chapter 5 *Single tests* for detailed description about the single test mode.

4.2.5 User / appliance data menu

In this menu lists of user and appliance data default names can be edited. An alternative is to upload the lists from PC.

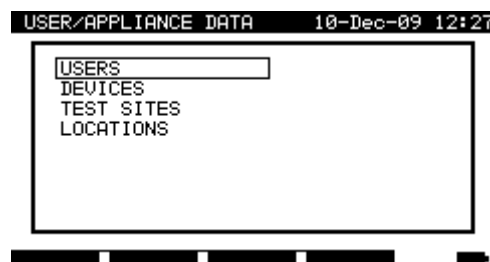


Users / appliance data main menu

Keys in user / device data menu:

▲ / ▼	Select the field to be changed.
ENTER	Confirms selection and opens menu of selected item.
ESC	Returns to General settings menu.

4.2.5.1 Users submenu

In this menu user names for up to 15 different users can be entered, edited and selected.

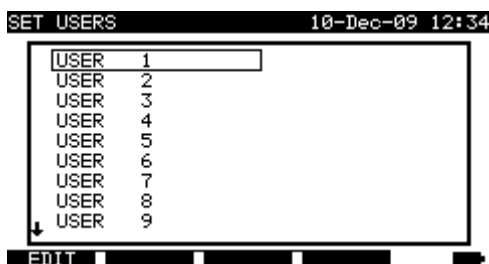


Users submenu

Keys in set users menu:

▲ / ▼	Select the user.
ENTER	Confirms selection and returns to User / device data menu.
EDIT (F1)	Opens Edit user menu for selected user, see 4.2.5.1.1. <i>Name editing menu.</i>
ESC	Discards modifications and returns to User / device data menu.

4.2.5.1.1 Name editing menu

The menu is intended for editing new/existing fields.

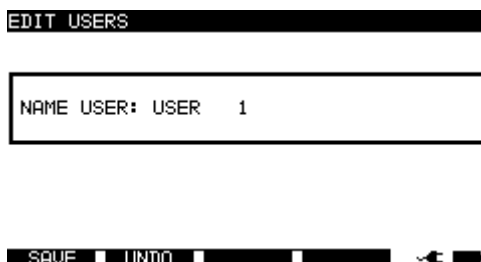

Edit item menu – example edit users

Keys in edit item menu:

Alphanumeric keys	Entering user name
SAVE (F1)	Confirms entry and returns back.
UNDO (F2)	Discards modifications and recover original entry.
ESC	Discards modifications and returns back.

4.2.5.2 Device submenu

In this menu, default lists of device names (up to 100) can be edited. The list can be also downloaded to/ uploaded from the PC SW PATlinkPRO. For more information refer to chapter 7.5 Data upload / download.




Devices submenu

Keys in device menu:

▲ / ▼ PgUp (F2) / PgDown (F3)	Select the device.
EDIT (F1)	Opens Edit device menu, for selected device, see 4.2.5.1.1. <i>Name editing menu.</i>
ESC	Discards modifications and returns to User / device data menu.

4.2.5.3 Test sites submenu

In this menu default lists of object names (up to 100) can be edited. The list can be also downloaded to/ uploaded from the PC SW PATlinkPRO. For more information refer to chapter 7.5 Data upload / download.

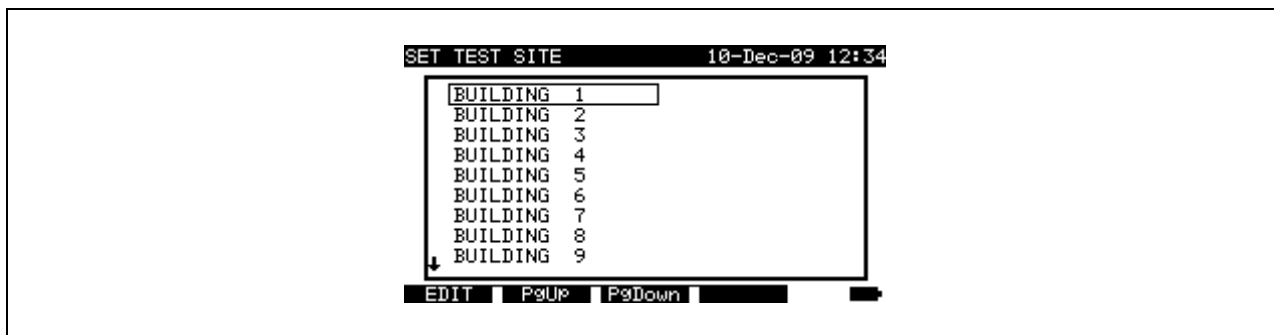

Test sites submenu


Keys in test sites menu:

▲ / ▼ PgUp (F2) / PgDown (F3)	Select the test site.
---	-----------------------

EDIT (F1)	Opens Edit test site menu for selected test site, see 4.2.5.1.1. <i>Name editing menu.</i>
ESC	Discards modifications and returns to User / device data menu.

4.2.5.4 Locations submenu

In this menu default lists of location names (up to 100) can be edited. The list can be also downloaded to or uploaded from the PC SW PATlinkPRO. For more information refer to chapter 7.5 *Data upload / download.*

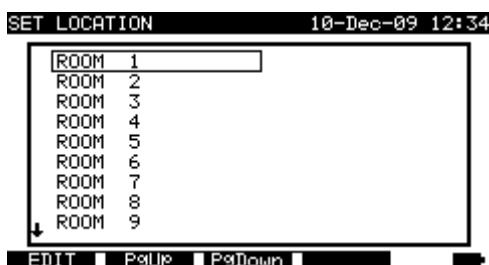


Locations submenu

Keys in device menu:

^ / v PgUp (F2) / PgDown (F3)	Select the location.
EDIT (F1)	Opens Edit location menu for selected location, see 4.2.5.1.1. <i>Name editing menu.</i>
ESC	Discards modifications and returns to User / device data menu.

4.2.6 Recall / delete / send results menu

Manipulation with stored data is allowed in this menu. Stored results can be recalled according to DUT name and date, deleted or send to PC or printers.

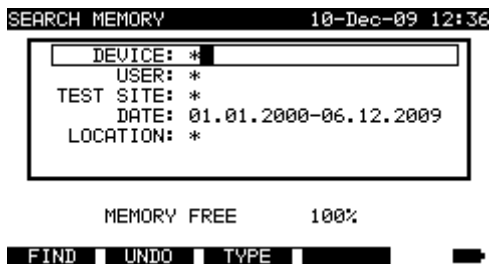

Recall results menu

See chapters 7.2 *Recalling results*, 7.3 *Deleting results* and 7.4 *Downloading and printing results* for more information.

4.2.7 Data upload / download menu

In this menu it is possible to upload different data from PC to the instrument:

- Stored test results and data (results, parameters, notes),
- List of default DUT and test site names,
- List of custom autosequences.




Upload of test data menu

See chapter 7.5 *Data upload / download* for detailed description about uploading / downloading data from or to a PC.

4.2.8 Setup menu

In the **Setup** menu the parameters of the instrument can be viewed or set.

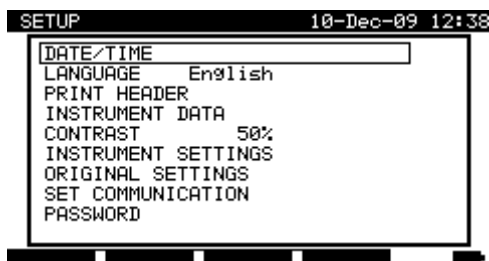

Setup menu


Keys in **Setup** menu:

▲ / ▼	<p>Select the setting to adjust or view:</p> <p><DATE/TIME>, day and time, see 4.2.8.1;</p> <p><LANGUAGE>, instrument language, see 4.2.8.2;</p> <p><PRINT HEADER>, printed header options, see 4.2.8.3;</p> <p><INSTRUMENT DATA>, data related to the SigmaPAT, see 4.2.8.4;</p>
-------	---

	<p><CONTRAST>, LCD contrast, see 4.2.8.5;</p> <p><INSTRUMENT SETTINGS>, various instrument settings, see 4.2.8.9;</p> <p><ORIGINAL SETTINGS>, reset the instrument to factory settings, see 4.2.8.6;</p> <p><SET COMMUNICATION>, communication parameters, see 4.2.8.7;</p> <p><PASSWORD>, to access restricted options, see 4.2.8.8.</p>
ENTER	Confirms selection.
ESC	Returns to the <i>Instrument main</i> menu.

4.2.8.1 Setting date and time

Selecting this option will allow the user to set the date and time of the unit. The following menu will be displayed:

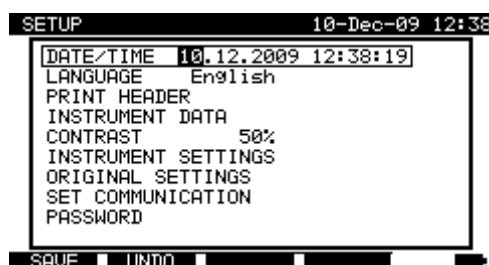

Date and time menu

Keys in date/time menu:


< / >	Select the field to be changed.
▲ / ▼	Modify selected field.
SAVE (F1)	Confirms selection and returns to Setup menu.
UNDO (F2)	Discards modifications and recover original entry.
ESC	Discards modifications and returns to Setup menu.

Notes:

- Date is attached to each PAT autotest measurement results!
- Date format is DD-MM-YYYY (day-month-year).
- Date entry is checked for regularity and is not accepted in case of irregular date!

4.2.8.2 Language selection

Selecting this option will allow the user to select the language in the instrument. The following menu will be displayed:

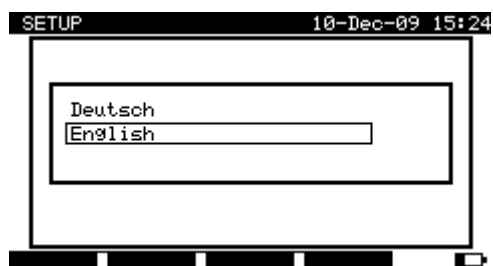


Language menu

Keys in Language menu:

▲ / ▼	Select the language.
ENTER	Confirms selection and returns to Setup menu.
ESC	Discards modifications and returns to Setup menu.

4.2.8.3 Print header

Selecting this option will allow the user to set text of printing header. The print header is appended to printout form when test results are printed using a serial printer.

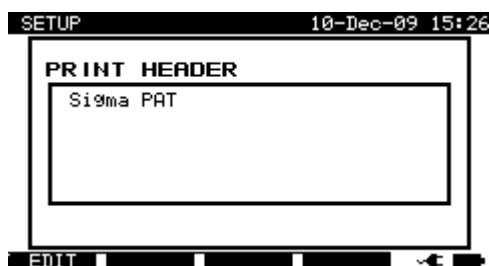

Print header menu



Editing print header

Keys in print header menu:

EDIT (F1)	Enters edit menu for entering print header.
ESC	Returns to Setup menu.


Keys in print header edit menu:

Alphanumeric keys	Entering header text
SAVE (F1)	Confirms selection and returns to Setup menu.
UNDO (F2)	Discards modifications and recover original entry.
ESC	Discards modifications and returns to Setup menu.

4.2.8.4 Viewing of instrument data

In this menu the following instrument data are shown:

- Producer name,
- Instrument name,
- Serial number,
- Firmware version,
- Calibration date.

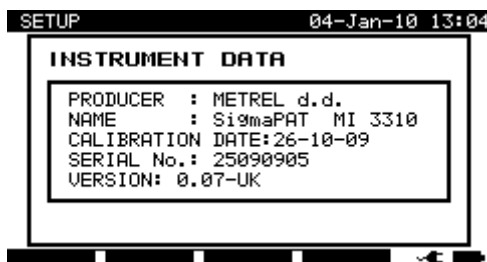

Instrument data menu

Key in instrument data menu:

ESC	Returns to Setup menu.
------------	-------------------------------

Note:

- Operator cannot change any instrument data!

4.2.8.5 Display contrast adjustment

Selecting this option will allow the user to set LCD contrast. The following menu will be displayed:



Contrast menu

Keys in contrast menu:

▲ / ▼	Modify contrast.
SAVE (F1)	Confirms selection and returns to Setup menu.
UNDO (F2)	Discards modifications and recover original entry.
ESC	Discards modifications and returns to Setup menu.


4.2.8.6 Instrument settings

When an autotest is completed, different data about DUT and other associated data can be added to the autotest results before saving them. In the **Instrument settings** submenu, the various data and data types can be customized.

The following data can be controlled between tests:

- DUT number,
- Test site,
- Location,
- User,
- DUT name,
- Retest period,
- Repairing code,
- Comments,
- Barcode system.

From the **Main** menu, select **Setup** and then select **Instrument settings** by using \uparrow and \downarrow cursor keys and press ENTER key to confirm. The **Instrument settings** submenu will be displayed.

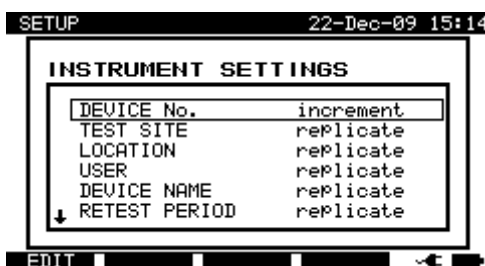


Instrument settings menu

Keys:

\downarrow / \uparrow	Select the item whose parameter will be changed.
EDIT (F1)	Highlight the parameter that can be changed.
ENTER	
ESC	Returns to main settings menu.

Changing the instrument parameter

The selected parameter is highlighted.

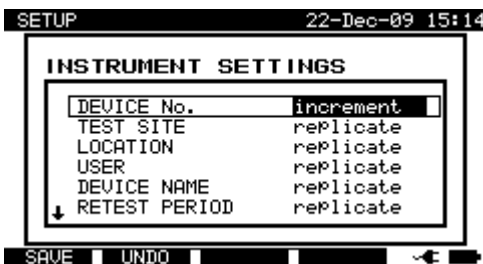

Modification of selected setting

Keys:

▼ / ▲	Modify highlighted parameter.
SAVE (F1)	Saves setting of selected item,
UNDO (F2)	Recovers currently modified setting.
ESC	Returns to main settings menu.

Notes:


- If blank is selected for a particular item, then the appropriate field will initially appear blank in the Save results menu.
- If replicate option is selected for a particular item, the last entered data will initially appear in an appropriate field when new autotest sequence is finished.
- The increment option can also be set in the device number field. In this case, the DUT number will be automatically incremented when new autotest sequence is finished.
- Special character »\$« between autotest shortcut code and DUT name (ID number) is used to distinguish shortcut code from DUT name.
- Only DUT ID is printed out on the 2nd DUT label (power supply cord label).
- Refer to Appendix B for more information about barcode systems.

4.2.8.7 Reset instrument settings

In this menu the following parameters can be set to their initial values:

- All measurement parameters in single test mode,
- User defined tests are cleared,
- Custom autotest sequences are replaced by factory pre-programmed ones,
- PC baud rate is set to 115200 bps,
- Printer protocol is set to hardware handshaking – flow control (DTR).

The following menu is displayed:

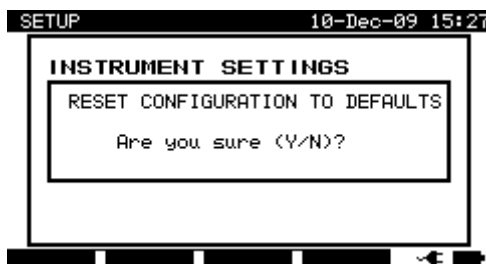


Original settings menu

Keys in instrument settings menu:

Y	Confirms reset to default values and returns to Setup menu.
N	Returns to Setup menu without reset.

4.2.8.8 Communication settings



In this menu, the communication port for communication with PC, serial (barcode) printer and barcode reader can be set. Also baud rate for communication with PC can be set. Following menu will be displayed:

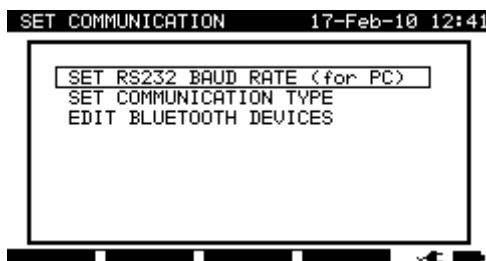

Communication menu

Keys in set communications menu:

▲ / ▼	Select the field to be changed. (EDIT BLUETOOTH DEVICES option is available only when instrument supports Bluetooth technology (optional)).
ENTER	Confirms selection and opens menu of selected option.
ESC	Returns to Setup menu .

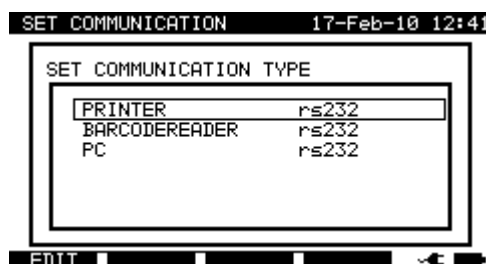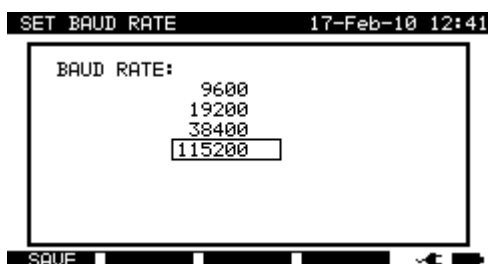

Communication settings

Keys in baud rate menu:

▲ / ▼	Select the proper option.
F1 (SAVE)	Confirms selection and returns to Set communications menu .
ESC	Returns to Set communications menu without changes.

Keys in communication type selection menu:

▲ / ▼	Select the proper option.
EDIT / ENTER	Communication type selection permitted.
SAVE	Confirms selection and returns back to menu.
UNDO	Returns back to menu without changes.
ESC	Returns back to menu or to Set communications menu without changes.

Note:

- ❑ Only one port can be active at one time.
- ❑ Baud rates for communication with serial (barcode) printer and barcode reader are set to 9600 bps and cannot be changed.
- ❑ Serial (barcode) printer and barcode reader can communicate with the instrument also using wireless Bluetooth technology (optional).

4.2.8.9 Wireless communication setup (optional)

Wireless communication can be set in **Set communication type** and **Edit bluetooth devices** sub-menus entered in **Set communication** main menu.

First select **Edit Bluetooth devices** in **Set communication** menu by using **▲** and **▼** keys and press **ENTER** key to confirm. The following menu is displayed.




Edit Bluetooth device menu

F2 (SEARCH)	Search for Bluetooth devices in near.
--------------------	---------------------------------------

Once Bluetooth devices in near were found, instrument displays their names and Bluetooth addresses. Up to 6 Bluetooth devices can be displayed.



Bluetooth devices in near

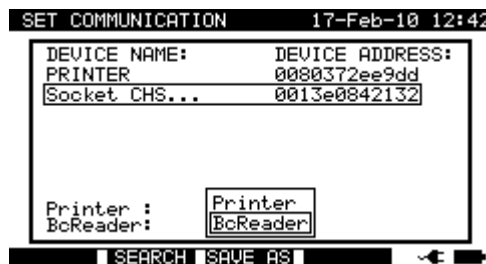

Set selected Bluetooth device as printer or barcode reader

F2 (SEARCH)	Search again for Bluetooth devices in near.
▲ / ▼	Select Bluetooth device
F3 (SAVE AS), ▲ / ▼	Selected Bluetooth device can be set as printer or barcode

▼	reader.
ENTER	Confirm selected option in SAVE AS sub-menu.
ESC	Returns back to Edit Bluetooth device or Set Communication menu.

When Bluetooth devices were set, they can communicate with the instrument using Bluetooth technology if communication type for printer and/or barcode reader is set to Bluetooth (Refer to paragraph 4.2.8.8 Communication settings).

Note:

- Using Bluetooth communication the following devices are supported: printer **O'Neil MF2te Bluetooth** and barcode reader **Socket CHS 7E2**.

4.2.8.10 Password

In password protected actions, it is necessary to enter the password before deleting or editing the protected data. The instrument requires a password and it will not allow changes unless the correct password has been entered.



Password menu

Keys in password menu:

Alphanumeric keys	Entering password.
ENTER	Accepts the password* and returns to Setup menu.
ESC	Discards modifications and returns to Setup menu.

Please take a note of this password and keep it in a safe place.

***Notes:**

- If there is no password protection, the instrument will request that you enter a new password twice, once to confirm.
- If the instrument is already password protected, then the instrument will request the old password before entering the new one twice, once to confirm.
- To disable the password protection, instead of entering a new password just press the ENTER key when asked for a new password and confirmation and the password will be disabled.

Contact your dealer if password is forgotten.

Password protected actions:

- Entering Edit user menu,
- Editing measurement parameters in single / autotest custom test mode,
- Deleting stored results,
- Entering Original settings menu.

5 Single tests


In the single test mode individual tests can be performed. This is especially helpful for troubleshooting.

Note:

- Single test results cannot be saved.

5.1 Performing measurements in single test mode

Select **Single test** in **main** menu by using \uparrow and \downarrow keys and press **ENTER** key to confirm. The **Single test** menu is displayed.

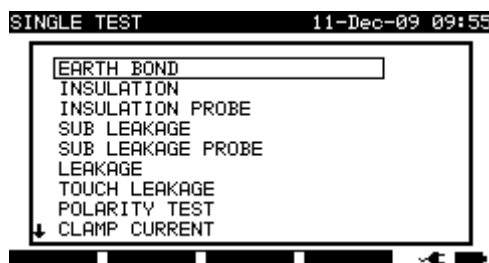

Single test menu

In **Single test** menu select single test by using \uparrow and \downarrow keys and press **ENTER** key to confirm.

Editing test parameters

Test measurement parameters of the selected single test are displayed in the top right corner of the display.

They can be edited by pressing the **EDIT** (F1) button and selected with by \uparrow and \downarrow keys. The selected parameter is highlighted. Its value can be set by using \leftarrow and \rightarrow keys.

Note:


- To keep new settings, press the **SAVE** (F1) key.

5.2 Measurements

5.2.1 Earth bond resistance

This test ensures that the connections between the protective conductor terminal in the mains plug of the DUT and earthed accessible conductive parts of the DUT (metal housing) are satisfactory and of sufficiently low resistance. This test has to be performed on Class 1 (earthed) DUT.

The instrument measures the resistance between mains test socket's PE terminal and EB/S terminal.

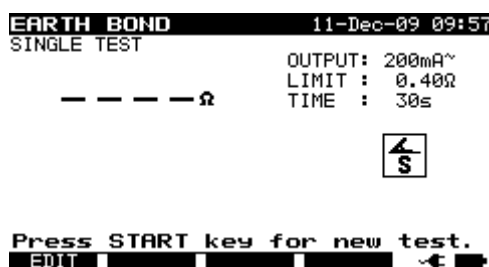


Earth bond menu

Test parameters for earth bond resistance measurement

OUTPUT	Test current [200 mA, 10 A]
LIMIT	Maximum resistance [0.1 Ω ÷ 0.9 Ω, 1 Ω ÷ 9 Ω]
TIME	Measuring time [2 s, 3 s, 5 s, 10 s, 30 s]

Test circuit for earth bond resistance measurement

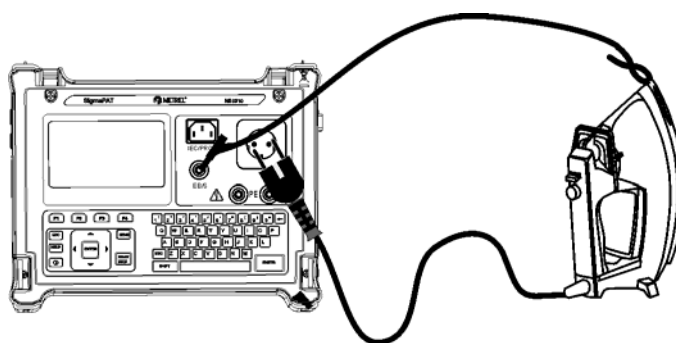

Measurement of earth bond resistance of class I DUT

Earth bond resistance measurement procedure

- Select the **EARTH BOND** function.
- Set test **parameters**.
- Connect** device under test to the instrument.
- Connect** test lead to S/C1 output on the instrument.

- Connect** EB/S lead to accessible metal parts of the device under test (see figure above).
- Press the **START** key for measurement.



Examples of earth bond resistance measurement results

Displayed results:

Main result earth bond resistance

Note:

- Consider displayed warnings before starting measurement!

5.2.2 Insulation resistance

The insulation resistance test checks the resistance between live conductors and accessible conductive parts of the DUT connected to PE or isolated. This test can disclose faults caused by pollution, moisture, deterioration of insulation material etc.

The instrument measures the insulation resistance between:

- Mains test socket (L+N, +) and PE / (EB/S, -) test terminals, and
- LN and PE / (EB/S) test outputs.



This function is primarily intended for testing Class I DUTs.



Insulation menu

Test parameters for insulation resistance measurement

OUTPUT	Test voltage [250 V, 500 V]
LIMIT	Minimum resistance [0.01 M Ω , 0.10 M Ω , 0.25 M Ω , 0.30 M Ω , 0.50 M Ω , 1.00 M Ω , 2.00 M Ω , 4.0 M Ω , 7.0 M Ω , 10.0 M Ω , none]
TIME	Measuring time [2 s, 3 s, 5 s, 10 s, 30 s, 60 s, 120 s, 180 s, none]

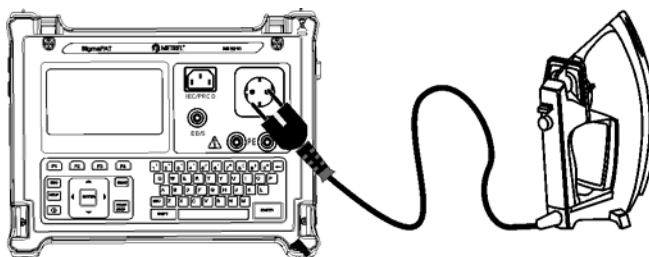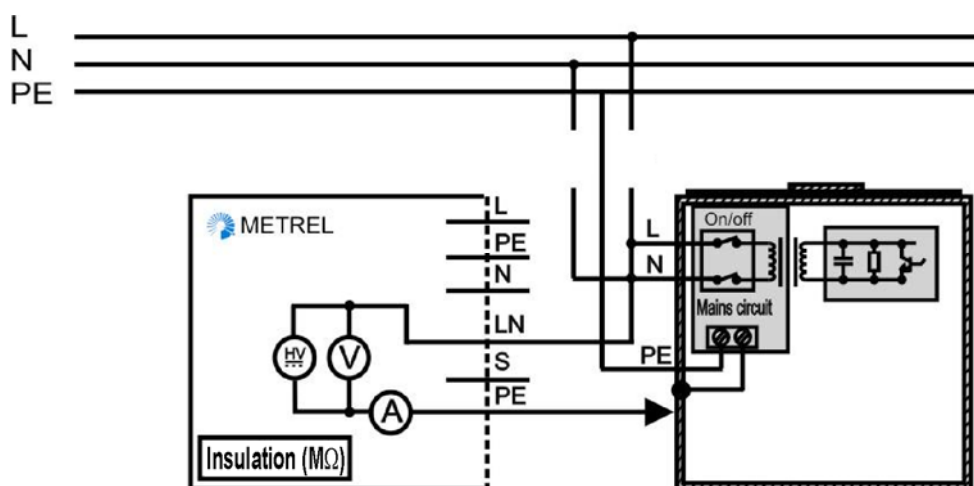Test circuits for insulation resistance measurement*Measurement of insulation resistance of Class I DUT**Measurement of insulation resistance of fixed installed DUTs of Class I***□ Insulation resistance measurement procedure**

- Select the **Insulation** function.
- Set test **parameters**.
- **Connect** device under test to the instrument (see figures above).
- For **fixed** equipment:
 - **Disconnect mains** supply of the fixed equipment;
 - **Connect** LN test socket of the instrument to L/N terminals of the fixed equipment;
 - **Connect** PE test socket of the instrument to metallic enclosure of the fixed equipment.
- Press the **START** key for measurement.



Examples of *insulation* resistance measurement results

Displayed results:

Main result Insulation resistance

Notes:

- Leakage currents into the EB/S and PE test inputs will influence insulation resistance measurement.
- When EB/S or PE probes are connected during the test then the current through them is also considered.
- The DUT should be de-energized before the measurement!
- Consider any warning on the display before starting the measurement!
- Do not touch or disconnect the DUT during the measurement or before it is fully discharged! The message »Discharging...« will be displayed while the voltage on the DUT is higher than 20 V!

5.2.3 Insulation resistance - S

The insulation resistance test checks the resistance between live conductors and isolated accessible metal parts of DUT. This test can disclose faults caused by pollution, moisture, deterioration of insulation material etc.

The instrument measures the insulation resistance between:

- Main test socket (L+N, +) and EB/S (-) test terminals, and
- LN (+) and EB/S (-) test sockets.

This function is primarily intended for testing Class II DUTs and Class II parts of Class I DUTs.




Insulation-S menu


Test parameters for insulation resistance measurement

OUTPUT	Test voltage [250 V, 500 V]
LIMIT	Minimum resistance [0.01 M Ω , 0.10 M Ω , 0.25 M Ω , 0.30 M Ω , 0.50 M Ω , 1.00 M Ω , 2.00 M Ω , 4.0 M Ω , 7.0 M Ω , 10.0 M Ω , none]
TIME	Measuring time [2 s, 3 s, 5 s, 10 s, 30 s, 60 s, 120 s, 180 s, none]

Test circuits for Insulation - S resistance measurement

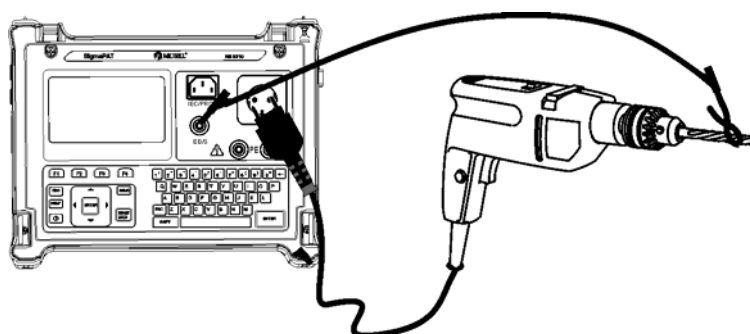

Measurement of insulation resistance of class II DUT

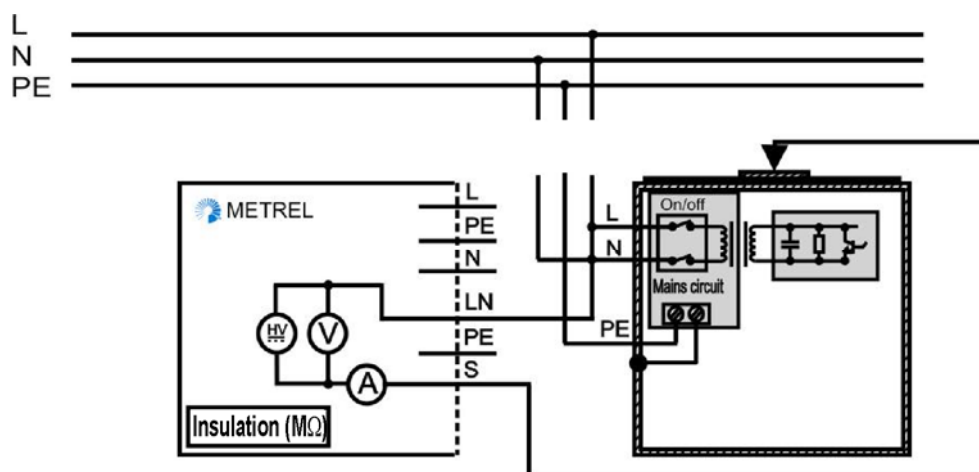

Measurement of insulation resistance of accessible isolated conductive parts of fixed installed DUTs

Insulation resistance S measurement procedure

- Select the **Insulation resistance-S** function.
- Set test **parameters**.
- Connect** device under test to the instrument (see figures above).
- Connect** EB/S probe to accessible conductive parts of the DUT.
- For **fixed equipment**:
 - Disconnect** mains supply of the fixed equipment;
 - Connect** LN test socket of the instrument to L/N terminals of the fixed equipment;
 - Connect** EB/S probe to accessible conductive parts of the fixed installed DUT
- Press the **START** key for measurement.



Example of insulation-S resistance measurement results

Displayed results:

Main result Insulation resistance (LN – S)

Notes:

- If a Class I device is connected to the mains test socket the currents flowing through the PE terminal will not be considered.
- The DUT should be de-energized before the measurement!
- Consider any warning on the display before starting the measurement!
- Do not touch / disconnect the DUT during the measurement or before it is fully discharged! The message »Discharging...« will be displayed while the voltage on the DUT is higher than 20 V!

5.2.4 Substitute leakage current

Leakage currents between live conductors and accessible metal parts (housing, screws, handles etc.) are checked with this test. Capacitive leakage paths are included in the result too. The test measures the current flowing at a test voltage of 40 V AC and the result is scaled to the value of a nominal mains supply voltage of 230 V AC.

The instrument measures the insulation resistance between:

- Main test socket (L+N) and PE / (EB/S) test terminals, and
- LN and PE / (EB/S) test sockets.


This function is primarily intended for testing Class I DUTs.




Sub leakage menu

Test parameters for substitute leakage current measurement

OUTPUT	Test voltage [40 V]
LIMIT	Maximum current [0.25 mA, 0.50 mA, 0.75 mA, 1.00 mA, 1.50 mA, 2.25 mA, 2.50 mA, 3.50 mA, 4.00 mA, 4.50 mA, 5.00 mA, 5.50 mA, 6.00 mA, 7.00 mA, 8.00 mA, 9.00 mA, none]
TIME	Measuring time [2 s, 3 s, 5 s, 10 s, 30 s, 60 s, 120 s, 180 s, none]

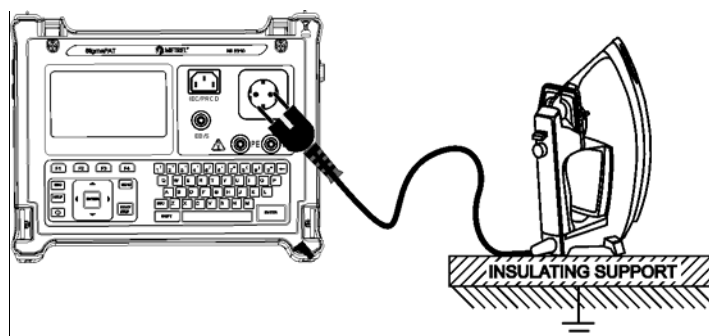

Measurement of substitute leakage current of class I DUT

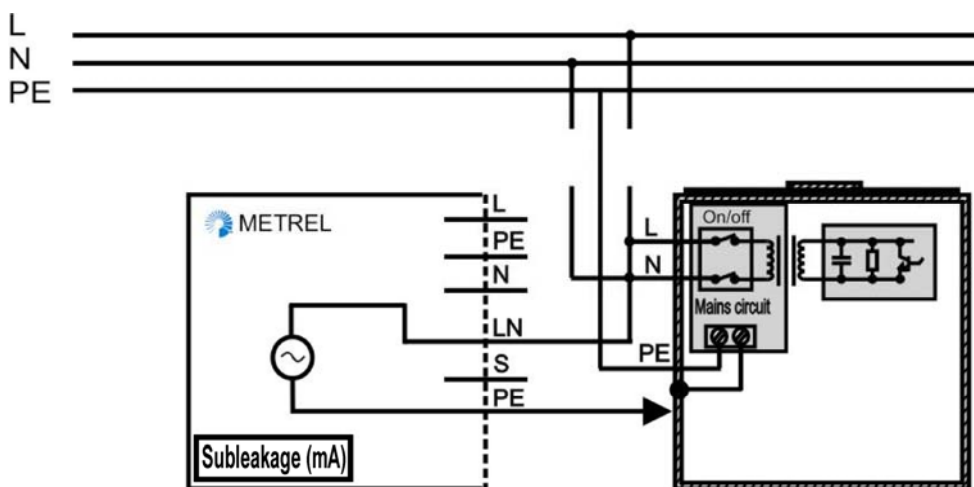

Measurement of substitute leakage current of fixed installed DUTs of class I

Substitute leakage measurement procedure

- Select the **Substitute leakage** function.
- Set test **parameters**.
- Connect** device under test to the instrument (see figures above).
- For **fixed equipment**:
 - Disconnect mains** supply of the fixed equipment;
 - Connect** LN test socket of the instrument to L/N terminals of the fixed equipment;
 - Connect** PE test socket of the instrument to metallic enclosure of the fixed equipment.
- Press the **START** key for measurement.



Example of substitute leakage current measurement results

Displayed results:

Main result substitute leakage current

Notes:

- Consider any displayed warning before starting measurement!
- Leakage currents into the EB/S and PE test inputs will influence substitute leakage current measurement.
- When EB/S or PE probes are connected during the test then the current through them is also considered.
- Substitute leakage current may differ substantially from that of conventional leakage current test because of the way the test is performed. For example, the difference in both leakage measurements will be affected by the presence of neutral to earth noise suppression capacitors.

5.2.5 Substitute leakage - S

Leakage currents between live conductors and isolated accessible metal parts (screws, handles etc.) are checked with this test. Capacitive leakage paths are included in the result too. The test measures the current flowing at a test voltage of 40 V AC and the result is scaled to the value of a nominal mains supply voltage of 230 V AC.

The instrument measures the insulation resistance between:

- Main test socket (L+N) and EB/S test terminals, and
- LN and EB/S test sockets.

This function is primarily intended for testing Class II DUTs and Class II parts of Class I DUTs.




Sub leakage-S menu


Test parameters for substitute leakage-S current measurement

OUTPUT	Test voltage [40 V]
LIMIT	Maximum current [0.25 mA, 0.50 mA, 0.75 mA, 1.00 mA, 1.50 mA, 2.25 mA, 2.50 mA, 3.50 mA, 4.0 mA, 4.50 mA, 5.00 mA, 5.50 mA, 6.00 mA, 7.00 mA, 8.00 mA, 9.00 mA, none]
TIME	Measuring time [2 s, 3 s, 5 s, 10 s, 30 s, 60 s, 120 s, 180 s, none]

Test circuits for substitute leakage-S measurement

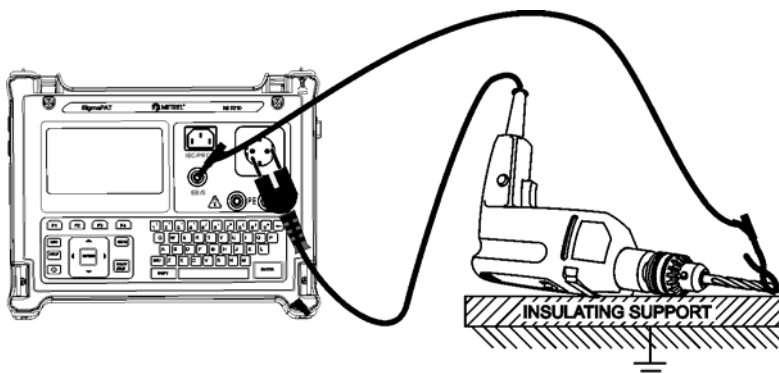

Measurement of substitute leakage current of class II DUT

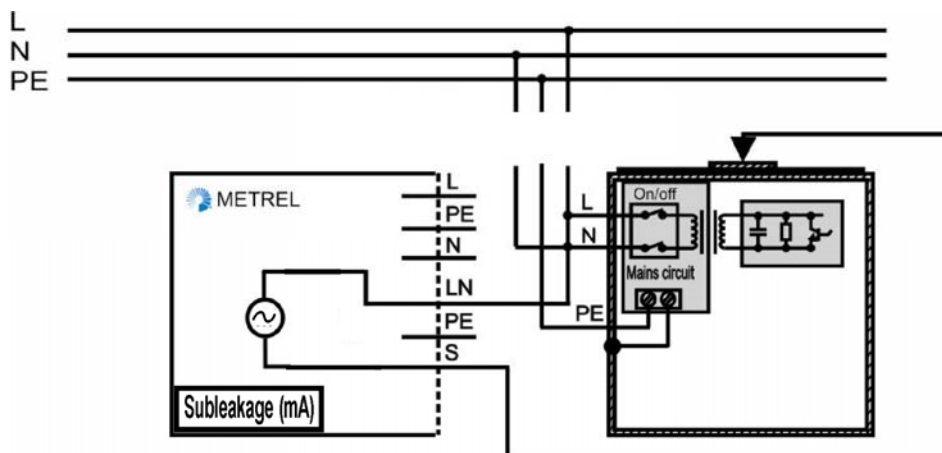

Measurement of substitute leakage of accessible isolated conductive parts of fixed installed DUTs

Substitute leakage-S measurement procedure

- Select the **Substitute leakage-S** function.
- Set test **parameters**.
- Connect** device under test to the instrument (see figures above).
- Connect** EB/S probe to accessible conductive parts of the DUT.
- For **fixed equipment**:
 - Disconnect mains** supply of the fixed equipment;
 - Connect** LN test socket of the instrument to L/N terminals of the fixed equipment;
 - Connect** EB/S probe to accessible conductive parts of the fixed installed DUT
- Press the **START** key for measurement.



Example of substitute leakage S current measurement results

Displayed results:

Main result substitute leakage current LN-S

Notes:

- Consider any displayed warning before starting measurement!
- If a Class I device is connected to the mains test socket the currents flowing through the PE terminal will not be considered.

5.2.6 Differential leakage current

The purpose of this test is to determine the sum of all leakages flowing from the live conductor to the earth. Because the differential method for determining leakage current is used the full and true DUT leakage current is always measured, even when parallel current paths to ground exist in the DUT.




Differential leakage current menu

Test parameters for differential leakage current measurement

OUTPUT	Test voltage [230 V]
LIMIT	Maximum current [0.25 mA, 0.50 mA, 0.75 mA, 1.00 mA, 1.50 mA, 2.25 mA, 2.50 mA, 3.50 mA, 4.00 mA, 4.50 mA, 5.00 mA, 5.50 mA, 6.00 mA, 7.00 mA, 8.00 mA, 9.00 mA, none]
TIME	Measuring time [2 s, 3 s, 5 s, 10 s, 30 s, 60 s, 120 s, 180 s, none]

Test circuit for differential current measurement

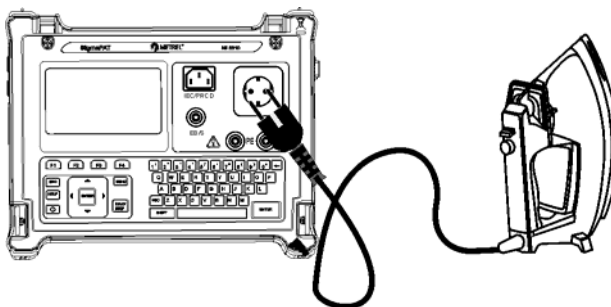

Measuring of differential current

Differential current measurement procedure

- Select the **Leakage function**.
- Set test **parameters**.
- Connect** device under test to the instrument (see figure above).
- Press the **START** key for measurement.



Examples of differential current measurement result

Displayed results:

Main result differential leakage current

Notes:

- During the test, a mains voltage is connected to the DUT. If DUT contains moving parts, make sure that it is safely mounted or protected to prevent possible danger to the operator or damage to the DUT or surrounding environment!
- Consider any displayed warning before starting measurement!
- The instrument automatically changes L and N polarity of connected DUT during the test.

5.2.7 Touch leakage current

This test determines the current that would flow if a person touches accessible conductive parts of the DUT.

The instrument measures the leakage current flowing through the EB/S probe into earth.

The DUT can be powered from the mains test socket or directly from the installation (fixed installed equipment).




Touch leakage menu

Test parameters for touch leakage current measurement


OUTPUT	System voltage [230 V]
LIMIT	Maximum current [0.25 mA, 0.50 mA, 0.75 mA, 1.00 mA, 1.50 mA, 2.00 mA, 3.5 mA, none]

TIME	Measuring time [2 s, 3 s, 5 s, 10 s, 30 s, 60 s, 120 s, 180 s, none]
------	--

Test circuits for touch leakage current measurement

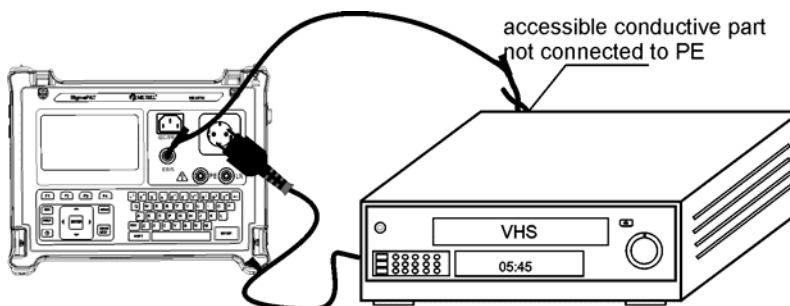

Measurement of touch leakage current

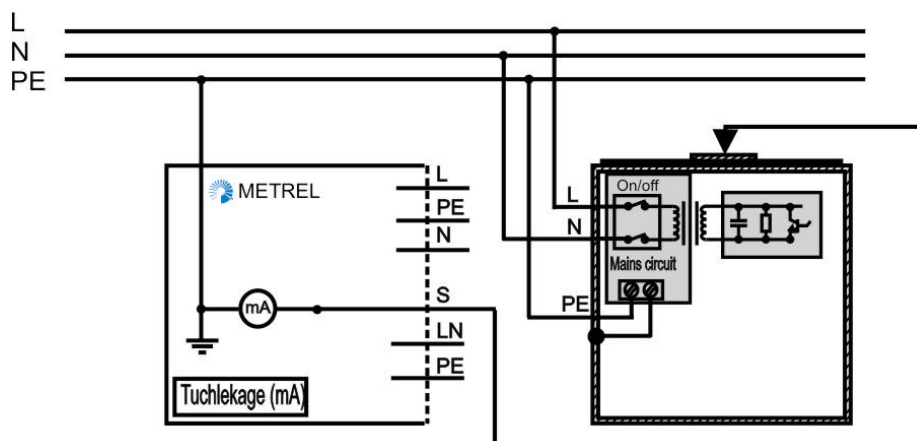

Measurement of touch leakage current on a fixed installed DUT

Touch leakage current measurement procedure

- Select the **Touch leakage** function.
- Set test **parameters**.
- Connect** EB/S probe to accessible conductive parts of the DUT (see figures above).
- For **Portable appliance/device**:
 - Connect** device under test to the instrument.
- For **fixed equipment**:
 - Power on** the fixed equipment;
- Press the **START** key for measurement.



Examples of touch leakage current measurement results

Displayed results:

Main result touch leakage current

Notes:

- During the test, a mains voltage is connected to the DUT. If DUT contains moving parts, make sure that it is safely mounted or protected to prevent possible danger to the operator or damage to the DUT or surrounding environment!
- Consider any displayed warning before starting measurement!
- The instrument automatically changes L and N polarity of connected DUT during the test.


5.2.8 Polarity test

In this test the polarity of supply cords/ leads is checked.

In the Standard mode the test is performed with internal low voltage sources.

The Active mode is intended to test cords/ leads with integrated RCD protection. Mains voltage is applied to the tested cord in order to operate the RCD during the test.

Shorted, crossed and open wires are detected in this test.

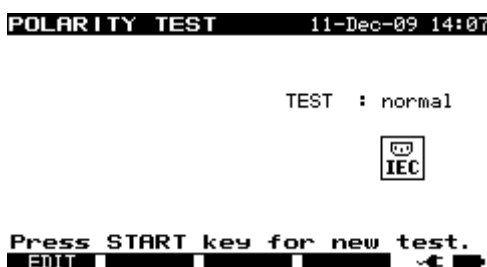


Polarity test menu


Test parameters for polarity test

TEST	Type of polarity test [normal, active]
------	--

Test circuits for polarity test

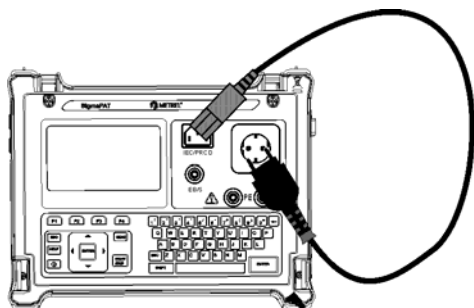

Polarity test - normal for IEC cord

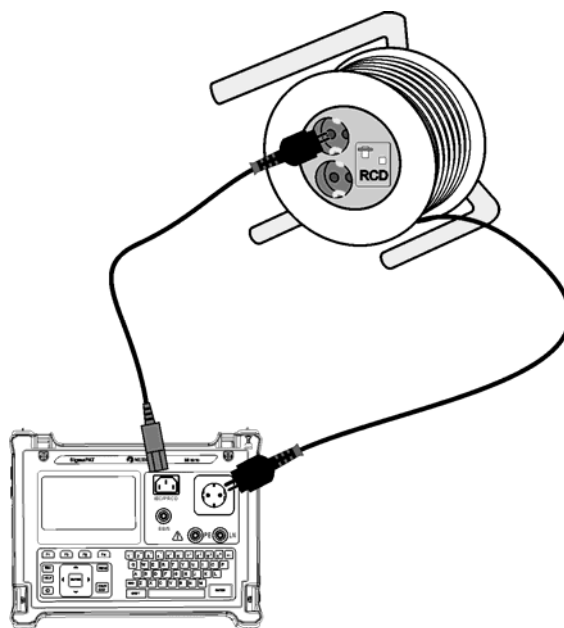

Polarity test - active for RCD protected cord

Polarity - Standard test procedure

- Select the **Polarity test** function.
- Select the **normal test** subfunction.
- Connect** tested IEC cord to the instrument (see figure above).
- Press the **START** key for measurement.

Polarity - Active test procedure

- Select the **Polarity test** function.
- Select the **active test** subfunction.
- Connect** tested IEC cord to the instrument (see figure above).
- Press the **START** key for measurement.
- Switch ON** the appliance (RCD) within 5 seconds and follow the instructions on the display.
- Switch ON** the RCD again if necessary.



Examples of polarity test result

Displayed results:

Main result PASS/ FAIL, description of fault

Notes:

- Consider any displayed warning before starting test!
- Active polarity test is intended for testing RCD equipped cords where RCD must be supplied for proper operation.
- In the active polarity test a switchover between phase and neutral at the mains test socket is performed during the test. Although the switchover time is short it could happen that the RCD switches off during the switchover. In this case the warning 'SWITCH ON THE APPLIANCE' is displayed again and the RCD must be re-switched ON.

5.2.9 Clamp current test

This function enables the measurement of AC currents in a wide range from 0.1 mA up to 25 A with current clamps. Typical applications are:

- Measuring PE leakage currents through PE conductor in permanently installed DUTs,
- Measuring load currents in permanently installed DUTs,
- Measuring differential leakage currents in permanently installed DUTs.




Clamp current menu

Test parameters for clamp current measurement

LIMIT	Maximum current [0.25 mA, 0.50 mA, 0.75 mA, 1.00 mA, 1.50 mA, 2.25 mA, 2.50 mA, 3.00 mA, 3.50 mA, 5.00 mA, 9.00 mA, none]
TIME	Measuring time [2 s, 3 s, 5 s, 10 s, 30 s, 60 s, 120 s, 180 s, none]

Test circuit for clamp current measurement

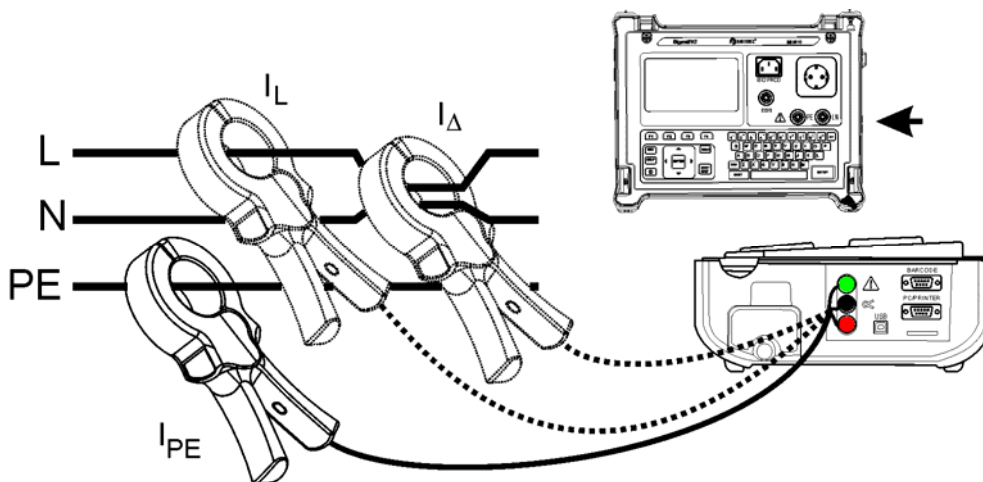

Connecting current clamp to the instrument

Clamp current measurement procedure

- Select the **Clamp current** function.
- Set test **parameters**
- Connect** the current clamp to the instrument (see figure above).
- Embrace** wire(s) that has to be measured with current clamp
- Press the **START** key for measurement.



Examples of clamp current measurement result

Displayed results:

Main result clamp current

Notes:

- When measuring leakage currents, the neighbour magnetic fields and capacitive coupling (especially from the L and N conductors) can disturb the results. It is recommended that the clamp is as close as possible to the grounded surface and away from wires and other objects under voltage or carrying current.
- METREL offers high quality current clamps for this application.

- Green socket is intended for current clamp shield terminal, if exists. This will improve measurement of leakage current. The socket is connected to internal grounding system and through this to PE.

5.2.10 RCD/PRCD test


The purpose of this test is to ensure the proper operation of the following residual current devices:

- Installed in electrical installation and
- Portable residual current devices (PRCD).

Trip-out measurements verify the sensitivity of a RCD at selected residual currents.



RCD test - single test menu

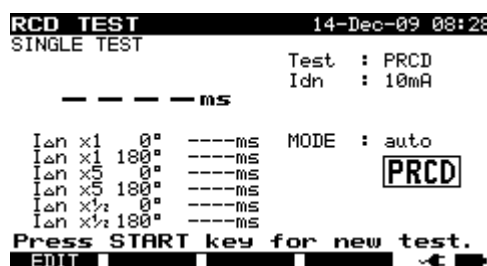

RCD test - autotest menu


Test parameters for RCD/PRCD test

Test	Type of residual current device [RCD, PRCD]*
$I_{\Delta N}$	Rated residual current [10 mA, 15 mA, 30 mA]
MODE	Type of RCD test [single, auto]

* In following text RCD is applied as common word for both RCD and PRCD type devices. Both are mentioned only where difference exists.

If Single mode is selected.

Multi	Actual test current $I_{\Delta N}$ [$\times \frac{1}{2}$, $\times 1$, $\times 5$]
Phase	Starting angle [0° , 180° , ($0^\circ, 180^\circ$)]

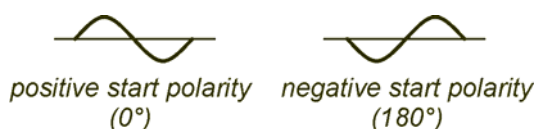

RCD test current starting polarities

Trip-out time limits

Trip-out times according to EN 61540:


	$\frac{1}{2} \times I_{\Delta N}^*)$	$I_{\Delta N}$	$5 \times I_{\Delta N}$
General RCDs (non-delayed)	$t_{\Delta} > 300$ ms	$t_{\Delta} < 300$ ms	$t_{\Delta} < 40$ ms

*) Minimum test period for current of $\frac{1}{2} \times I_{\Delta N}$, RCD shall not trip-out.


Maximum test times related to selected test current for general (non-delayed) RCD

Standard	$\frac{1}{2} \times I_{\Delta N}$	$I_{\Delta N}$	$5 \times I_{\Delta N}$
EN 61540	400 ms	400 ms	40 ms
PRCD	1999 ms	200 ms	40 ms
RCD	300 ms	300 ms	40 ms

Circuits for testing RCD

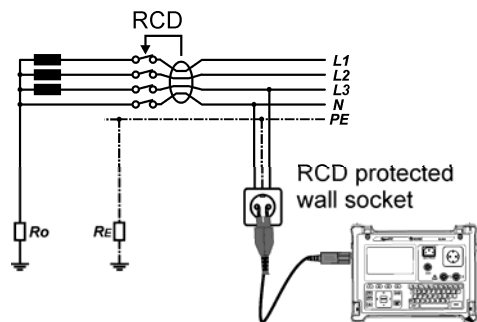

Testing of standard **RCD**

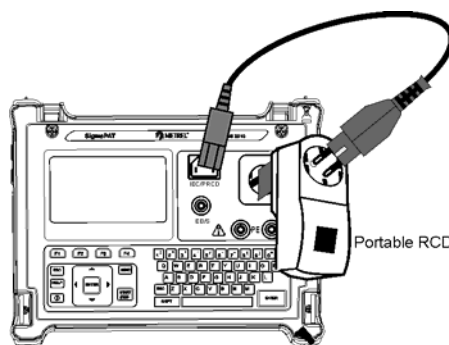

Testing of portable RCD (**PRCD**)

5.2.10.1 RCD single test

Trip-out time measurement procedure

- Select the **RCD test** function.
- Select **Single test** mode.
- Set test **parameters**.
- PRCD**: Connect tested PRCD between test socket on the SigmaPAT and IEC appliance connector (see figure above). Depending on the type of PRCD, it may be necessary to manually switch it on.
- RCD**: Connect the SigmaPAT main entry to socket protected by tested RCD (see figure above).
- Press the **START** key to perform measurement.
- If both current polarities are selected:
- Reactivate** tested RCD.



Examples of RCD test result

Displayed results:

Main result last measured results


Subresults all results are displayed as subresults

5.2.10.2 Automatic RCD test


RCD autotest function is intended to perform a complete RCD analysis (trip-out times at different residual currents and current phases).

RCD autotest procedure

RCD Autotest steps	Notes
<ul style="list-style-type: none"> <input type="checkbox"/> Select the RCD test function. <input type="checkbox"/> Set Auto test mode. <input type="checkbox"/> Select test parameters. <input type="checkbox"/> PRCD: Connect tested PRCD between test socket on the SigmaPAT and IEC appliance connector (see figure above). Depending on the type of PRCD, it may be necessary to manually switch it on. <input type="checkbox"/> RCD: Connect the SigmaPAT main entry to socket protected by tested RCD (see figure above). <input type="checkbox"/> Press the START key. 	Start of test
<input type="checkbox"/> Test with $I_{\Delta N}$, 0° (step 1).	RCD should trip-out
<ul style="list-style-type: none"> <input type="checkbox"/> Re-activate RCD. <input type="checkbox"/> Test with $I_{\Delta N}$, 180° (step 2). 	RCD should trip-out
<ul style="list-style-type: none"> <input type="checkbox"/> Re-activate PRCD. <input type="checkbox"/> Test with $5 \times I_{\Delta N}$, 0° (step 3). 	RCD should trip-out
<ul style="list-style-type: none"> <input type="checkbox"/> Re-activate RCD. <input type="checkbox"/> Test with $5 \times I_{\Delta N}$, 180° (step 4). 	RCD should trip-out
<ul style="list-style-type: none"> <input type="checkbox"/> Re-activate RCD. <input type="checkbox"/> Test with $\frac{1}{2} \times I_{\Delta N}$, 0° (step 5). 	RCD should not trip-out
<input type="checkbox"/> Test with $\frac{1}{2} \times I_{\Delta N}$, 180° (step 6).	RCD should not trip-out End of test.

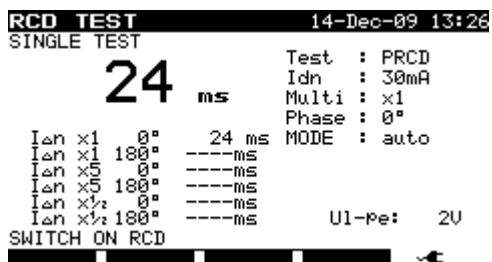

Step 1

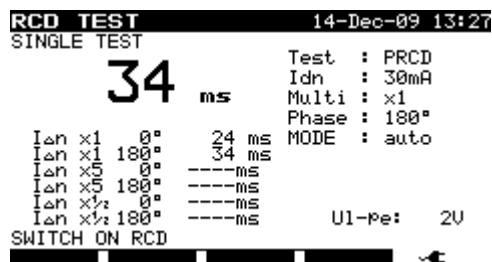

Step 2

```

RCD TEST          14-Dec-09 13:28
SINGLE TEST
    6 ms          Test : PRCD
                  Idn  : 30mA
                  Multi: x5
                  Phase: 0°
                  MODE : auto
Ian x1  0°      24 ms
Ian x1 180°     34 ms
Ian x5  0°       6 ms
Ian x5 180°    ----ms
Ian x½  0°      ----ms
Ian x½ 180°    ----ms
U1-pe: 2V
SWITCH ON RCD

```

Step 3

```

RCD TEST          14-Dec-09 13:35
SINGLE TEST
   10 ms         Test : PRCD
                  Idn  : 30mA
                  Multi: x5
                  Phase: 180°
                  MODE : auto
Ian x1  0°      24 ms
Ian x1 180°     34 ms
Ian x5  0°       6 ms
Ian x5 180°    10 ms
Ian x½  0°      ----ms
Ian x½ 180°    ----ms
U1-pe: 2V
SWITCH ON RCD

```

Step 4

```

RCD TEST          14-Dec-09 13:37
SINGLE TEST
 >1999 ms       Test : PRCD
                  Idn  : 30mA
                  Multi: x½
                  Phase: 0°
                  MODE : auto
Ian x1  0°      25 ms
Ian x1 180°     34 ms
Ian x5  0°       6 ms
Ian x5 180°    10 ms
Ian x½  0°     >1999 ms
Ian x½ 180°    ----ms

```

Step 5 and

```

RCD TEST          14-Dec-09 13:39
SINGLE TEST
 >1999 ms       Test : PRCD
                  Idn  : 30mA
                  Multi: x½
                  Phase: 180°
                  MODE : auto
Ian x1  0°      24 ms
Ian x1 180°     34 ms
Ian x5  0°       6 ms
Ian x5 180°    10 ms
Ian x½  0°     >1999 ms
Ian x½ 180°    >1999 ms

```


 Press START key for new test.

Step 6

Individual steps in RCD autotest

The test passes if tested RCD:

- Does not trip out at $\frac{1}{2} \times I_{\Delta N}$ tests, and
- Trips inside predefined time limits at $I_{\Delta N}$, and $5 \times I_{\Delta N}$ tests.

Displayed results:

Main result last measured results

Sub-results all results are displayed as sub-results

U1-pe voltage UL-PE

Notes:

- Consider any displayed warning before starting measurement!
- For DUTs with integrated RCD the housing must be opened to access the RCD's L output terminal (this should only be performed by a competent engineer).
- Mains voltage is applied to the RCD under test. Do not touch the equipment under test or the test leads during the test!

5.2.11 Functional test

The DUT's power consumption is measured in this test. The apparent power is useful indication for proper operation of the DUT.

6 Autotest sequences

Autotest is the fastest and easiest way to test DUTs. During the autotest preprogrammed measurements runs automatically in a sequential way. The complete autotest results can be stored together with their associated DUT name and all related information.

6.1 Shortcut to autotests

In this autotest menu any of the pre-defined autotest procedures can be selected. Pre-programmed sequences cover almost all *in-service* tests, regardless of appliance type and safety class.

All limits and tests are in compliance with currently valid standards and regulations. In case of any changes, new firmware will be available at your distributor or from Metrel directly.

The Autotest shortcut sequences depend on the instrument model. The complete list of autotest shortcut sequences can be found in Appendix A of this manual.

6.1.1 Selecting the autotest shortcut sequence



Autotest shortcut menu examples

Keys:

▼ / ▲	Select the autotest parameter.
◀ / ▶	Select the autotest shortcut code or selected parameter value.
Numeric keys	<i>For Code field:</i> Enter the autotest shortcut code manually, 3 digits.
VIEW (F1)	Opens View menu for viewing details of selected test sequence.
START	Starts the selected autotest. See chapter 6.5 <i>Performing autotest sequences</i> .
ESC	Returns to Main menu.


If the appropriate test code is unknown, the appliance sequence can be selected based on the appliance type and safety class.

The three-digit autotest code can also be selected by using the barcode reader, see chapter 6.4 *Working with barcode reader*.

All test parameters and limits can simply be viewed on the display. For more information refer to chapter 6.1.2 *Viewing autotest shortcut sequence measurement parameters*.

6.1.2 Viewing autotest shortcut sequence measurement parameters

After pressing the F1 function key in *Autotest shortcut* menu the measurement parameters of the selected autotest sequence are detailed.

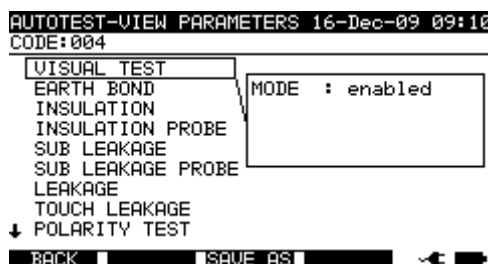

Autotest shortcut view menu

Keys:

▼ / ▲	Select observed test function to view its parameters.
START	Starts the selected autotest sequence. See chapter 6.5 <i>Performing autotest sequences</i> .
SAVE AS (F2)	Opens menu for saving selected autotest sequence as new custom autotest. See chapter 6.2.1.2 <i>Saving autotest sequences</i> .
BACK (F1)	Returns to Autotest shortcut menu.
ESC	

The following parameters can be viewed in general for all measurements / tests:

- › Measurement mode,
- › Output test voltage or current (except in visual test and TRMS current measurement),
- › Pass level (except in visual test),
- › Measurement duration (except in visual test).

Measurement mode options

Mode	Option	Note
<i>Disable</i>	The selected measurement is skipped.	
<i>Single</i>	One measurement will be performed during the autosequence.	
<i>Continuous</i>	Up to 10 repetitive measurements can be performed.	
<i>Enable</i>	Test can be performed.	Only visual test and polarity test

6.2 Custom autotests


In autotest custom menu setting and editing user-defined autotest procedures is allowed. Up to 50 custom autotest sequences can be pre-programmed in this autotest mode.

8 pre-programmed autotest sequences are added to the list by default.

The sequences can be also uploaded from the PC software PATLink PRO. Refer to chapter 7.5 *Upload test data* for more information.

The pre-programmed sequences can be restored to default settings by selecting *Original settings* in **Setup menu**.

Select Custom Autotest in PAT testing main menu.

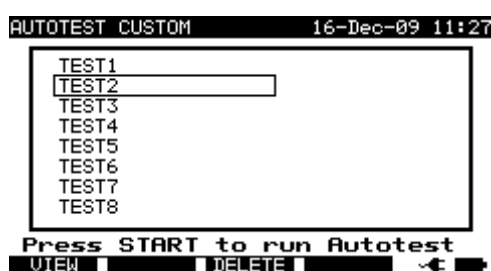

Custom autotest menu

Keys:


▼ / ▲	Select the custom autotest.
VIEW (F1)	Opens View menu for viewing details of selected test sequence
DELETE (F3)	Removes selected test, see chapter 6.2.2 <i>Deleting an existing custom test sequence</i> .
START	Starts the selected autotest. See chapter 6.5 <i>Performing autotest sequences</i> .
ESC	Returns to Main menu.

Note:

- If more than 50 autotests are saved, »*Out of memory*« message is displayed.

6.2.1 Viewing, modifying and saving an custom autotest

An existing custom autotest sequence can be viewed, modified and saved. These functionalities are available in the *Custom autotest view menu*.

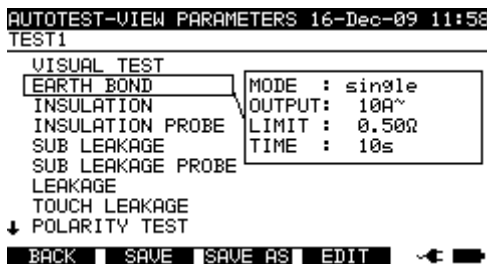

View setup of selected custom autotest

Keys in custom autotest sequence view mode:


▲ / ▼	Select test function in the sequence.
SAVE (F2)	Stores autotest sequence under the same name. See chapter 6.2.1.2 <i>Saving autotest sequences.</i>
SAVE AS (F3)	Stores autotest sequence under a new name. See chapter 6.2.1.2 <i>Saving autotest sequences.</i>
EDIT (F4)	Opens menu for modifying parameters of selected test function. See chapter 6.2.1.1 <i>Modification of an autotest sequence</i>
START	Starts running the selected autotest. See chapter 6.5 <i>Performing autotest sequences.</i>
BACK (F1) ESC	Returns back to custom autotest menu.

6.2.1.1 Modification of an autotest sequence

Each test function has at least one parameter to set / reset or adjust.

Common parameters

MODE	Defines appearance of selected function, see description in chapter 6.1.2 <i>Viewing autotest shortcut sequence measurement parameters.</i>
If MODE not disabled	
OUTPUT	Amplitude of measuring quantity, see particular test functions.
LIMIT	Limit value of measured item, intended for PASS/FAIL decision.
TIME	Required test period.

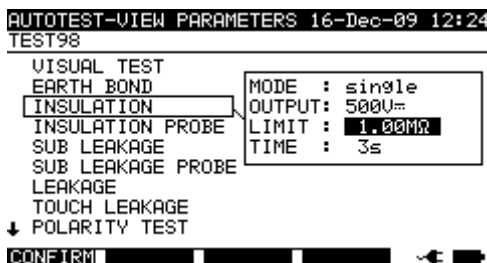

Modification parameters of selected test function


Keys:

▼ / ▲	Select the parameter.
◀ / ▶	Change the value of selected parameter (highlighted).
CONFIRM (F1)	Accepts modified function and returns to the view of selected test sequence.
ESC	Returns to the view of selected test sequence without changes.

6.2.1.2 Saving autotest sequences

There are two saving possibilities; they are defined in view menus of particular autotest option.

SAVE	Stores autotest sequence in the place of selected autotest sequence, name can be modified.
SAVE AS	Stores as new autotest sequence next to the last one, existing-base autotest sequence keeps unchanged.

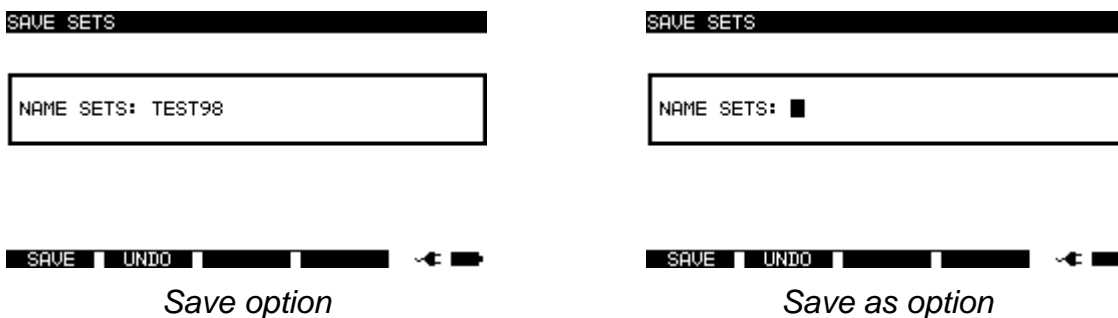

Autotest custom Save menus

Keys:

◀ / ▶	Select character in line.
Alphanumeric	Enters character.
SHIFT+ Alphanumeric	Enters small letter or special character.
←	Deletes character left to cursor.
SAVE (F1)	Confirms saving custom autotest sequence under entered name.
UNDO (F2)	Discards modifications and recover original entry.
ESC	Returns back to custom autotest menu.

6.2.2 Deleting an existing custom test sequence



Delete selected custom autotest sequence

Keys:

Y/ N	Confirms or rejects deleting of selected custom autotest sequence.
Any other key	Return back to custom autotest menu without changes.

Note:

- If only one custom autotest is defined it cannot be deleted from the list!

6.3. Project autotests

The *Project autotests* is an unique tool that dramatically simplifies and speeds up repeated (periodic) testing of DUTs.

The main idea is to re-use known stored data (either in instrument or on a PC) of the tested DUT. The following data can be recalled from the instrument's memory and re-used:

Test sequence

If the sequence has not changed (this is usually the situation) the user does not need to care about setting the right test sequence and parameters.

DUT data

ID number, names, descriptions, addresses, comments are not needed to be re-entered again. Old data are offered by default.

Old test results

New Project Autotest test results can be compared with previous results. The instrument automatically calculates the trends for each measurement.

Note:


- If the test results are close to the limit they should be compared with old test results. If the trends are deteriorating, the safety of the DUT and the time between test should be reassessed. If the results stay stable the DUT can generally be treated as safe.

Old test results can be uploaded from a PC back to the instrument. This brings further advantages:

- Old test results are not occupying the instrument's memory and can be temporarily uploaded only for the purpose of re-testing,
- Test results and DUT data can be moved / shared among different test instruments,
- DUT data can be pre-entered on the computer and then sent to the instrument.

6.3.1 Selecting a project autotest

The first step when performing project autotests is to recall the appropriate stored DUT data from the instruments memory. The procedure is similar as if test results are to be recalled from the instrument's memory.

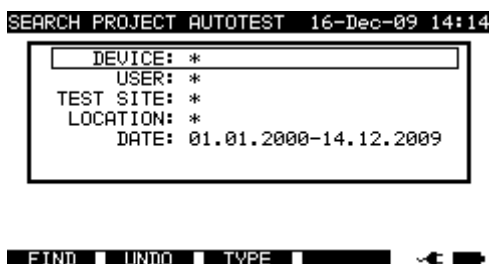

Project autotests main menu

When searching for stored autotest results the following filters can be used to narrow the hits:

- Device number,
- User
- Test site,
- Location
- Date from and date to.

Keys:

▼ / ▲	Select filter line.
◀ / ▶, Alphanumeric	Edit selected filter.
FIND (F1)	Starts search after filters are setup correctly.
UNDO (F2)	Undo latest change.
TYPE (F3)	Selects parameter line type.
ESC	Returns to Main menu.

Notes:

- To change the selected parameter line type, press the TYPE (F3) key and the »parameter type« will become highlighted (e.g. DUT). The keys ◀ and ▶ can then be used to change the parameter type and by pressing ENTER key the choice can be confirmed. Once the parameter types have been set up, the data required to filter the files can be inserted. Filter information can be inserted via the alphanumeric keypad or, in some filter fields such as user, can also be selected from a predefined list by pressing the LIST (F4) key. The DUT number field can also be read using a barcode reader.
- By placing a »*« (shift + "2") in a particular field, tells the instrument not to search the associated filter field. When searching, the instrument will therefore ignore data in this parameter and go on to find all the DUTs that conform to data placed in the other filter fields.
- To find all stored results, enter »*« in the all fields (excluding DATE where the correct from and to dates must be entered).

If the search filters are set up correctly and the DUTs exist in the units memory, the **Project autotests result** menu will be displayed.

While recalling stored results, the instrument shows a bar graph and a ratio of files found compared to files stored in memory (e.g. 7/11 implies 7 results have been found to meet the filter criteria out of a potential 11 results stored in the flash memory).

PROJECT AUTOTEST		18-Dec-09 09:20										
DEVICE:	MA4806											
TEST SITE:	DEVELOPMENT	<input checked="" type="checkbox"/>										
LOCATION:	ROOM NORTH											
TIME/DATE:	15:21 16.12.2009											
USER:	USER	1										
<table border="1" style="width: 100%;"> <tbody> <tr> <td>333333</td> <td>I</td> </tr> <tr> <td>333334</td> <td>I</td> </tr> <tr> <td>MA4804</td> <td>I</td> </tr> <tr> <td>MA4805</td> <td>I</td> </tr> <tr> <td>MA4806</td> <td>I</td> </tr> </tbody> </table>			333333	I	333334	I	MA4804	I	MA4805	I	MA4806	I
333333	I											
333334	I											
MA4804	I											
MA4805	I											
MA4806	I											

Project autotest result menu

Keys:

▼ / ▲	Select the DUT that should be retested.
PgUp (F1)	
PgDown (F2)	
ENTER	Recalls autotest project results for selected DUT.
START	Starts running new autotest for selected DUT, see 6.3.2 <i>Starting a project autotest</i>
ESC	Returns to Main menu.

Note:

- Barcode reader can also be applied for selecting the DUT, see chapter 6.4 *Working with barcode reader*.

DUT tickers

Each DUT is marked with a ticker. The ticker appears at the right of the DUT number and helps to speed up finding DUTs to be retested.

The meaning of the tickers is as follows:

- PC The stored DUT data was uploaded from PC
 PC✓ The stored DUT data was uploaded from PC and has been retested
 I The stored DUT data was performed with the instrument and stored.
 I✓ The stored DUT data was performed with the instrument and stored and has been retested.

Recalling autotest project results for selected DUT

```

RECALL MEMORY          16-Dec-09 15:22
  DEVICE: MA4806
  TEST SITE: DEVELOPMENT
  LOCATION: ROOM NORTH
  USER: USER 1
  
```

FUNCTIONS	PARAMETERS	LIMIT	RESULTS	S
↑ EARTH BOND	200mA~	0.30Ω	0.00Ω	P
INSULATION	500U=	1.00MΩ	>19.99MΩ	P
INSULATION P	500U=	2.00MΩ	>19.99MΩ	P
SUB LEAKAGE	40U~	1.00mA	0.04mA	P
SUB LEAKAGE P	40U~	1.00mA	0.02mA	P
↓ LEAKAGE	230U~	0.50mA	0.02mA	P

PgUp PgDown ←


View results menu examples

Keys:

▼ / ▲	Scroll over stored results of particular functions for selected custom autotest sequence.
PgUp (F1)	
PgDown (F2)	
ESC	Returns to Main menu.

6.3.2 Starting a project autotest

Starting the project autotest will apply the sequence as is defined for selected device. Each test function that is not disabled is executed in prescribed order, see 6.5 *Performing autotest sequences*. After the prescribed testing is finished, the instrument offers some saving options.

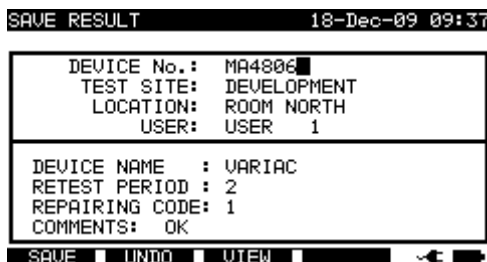

Saving options after retesting

Keys:


SAVE (F1)	Saves results, see 7.1 <i>Saving autotest results</i> .
VIEW (F3)	Opens menu for viewing and evaluating test results. See chapter 6.3.3 <i>Comparison of results</i> .
UNDO (F2)	Returns to Project Autotest menu.
ESC	

Exactly the same DUT data (except time and user) will be offered to store in the selected Project autotest.

When a new autotest is saved, it will get an »I« ticker. The original autotest will get a »I✓« or »PC✓« ticker when the DUT is retested through the project autotest.

6.3.3 Comparison of results (evaluation of result trends)

Viewing results of retested DUT offers not only to check results as they are but also an additional option TREND is offered. Trend enables evaluation of critical safety parameters of the DUT.

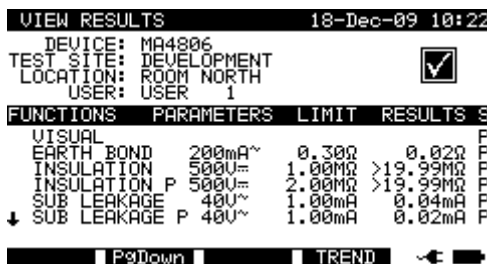


View Project autotest results menu

Keys:

▼ / ▲	Scroll over test results of particular functions.
PgUp (F1)	
PgDown (F2)	
TREND (F4)	Trend comparison of current results with stored.
ESC	Returns to Project autotest menu.

Evaluation of test results

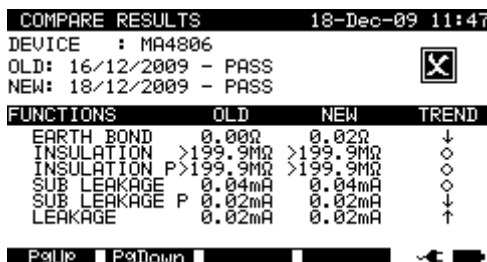

Compare results menu example

Meaning of trend symbols:

- ↑ New result of particular test is better than last result.
 Examples: New insulation resistance result is higher than old result.
 New earth bond result is lower than old one.
- Difference between old and new result of particular test is so small that can be treated as the same.
 Example: New insulation resistance result stays at the same level as old result.
- ↓ New result of particular test is worse than last result.
 Examples: New insulation resistance result is lower than old result.
 New earth bond result is higher than old one.

Keys:

▼ / ▲	Scroll over comparison results of particular functions.
PgUp (F1)	
PgDown (F2)	
ESC	Returns to Project autotest menu.

Note:

- Trend operates only before saving the new results of autotest procedure and with existing old results of the same autotest procedure in the instrument memory.

6.4 Working with barcode reader

The instrument enables application of barcode for testing automation and speedup. It supports the following functions:


- Reading pre-defined autotest shortcut codes,
- Reading DUT numbers.

This enables running predefined autotest sequence or select tested device.

For this purpose the barcode reader shall be connected to BARCODE connector of the instrument, see the figures below.

Refer to chapter 4.2.8.8 *Communication settings* for working with barcode reader using Bluetooth technology (optional).

Two Barcode systems are supported. Refer to Appendix B for detailed information.

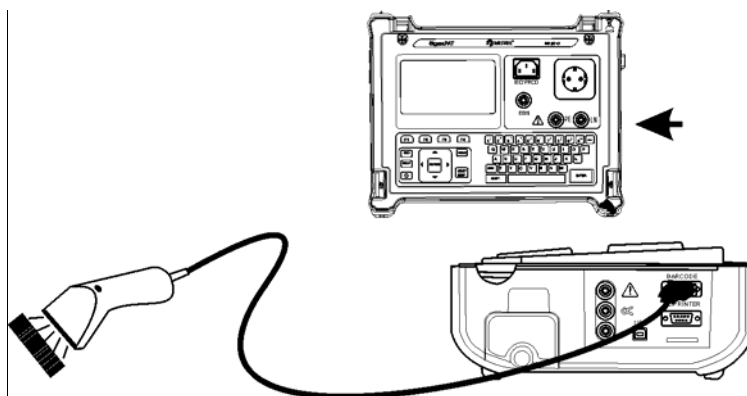

Connecting barcode reader to the SigmaPAT instrument

6.4.1 Reading barcode for autotest

The instrument automatically enables barcode reading in **Autotest shortcut** menu and **Project autotest** menu instead manual entry of shortcut code and/or device number.



Shortcut code




Device number

Barcode reading possibilities

A successful receive of the barcode is confirmed by two short confirmation beeps.

6.4.2 Reading barcode for working with results

For working with stored results, the barcode reader can also be applied for DUT number entry. A successful receive of the barcode is confirmed by two short confirmation beeps.

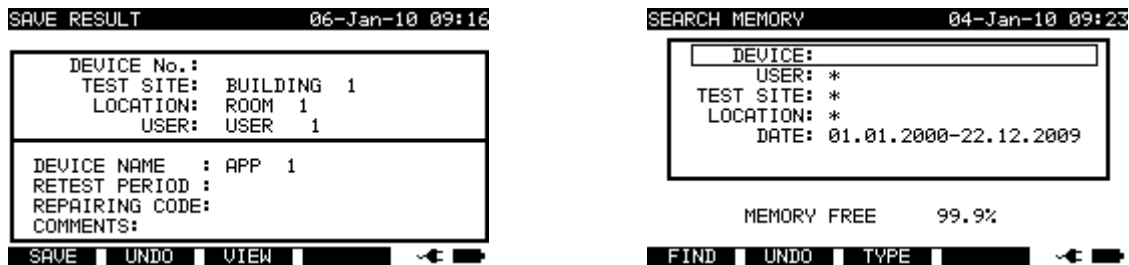

Adding DUT number in save results / search results menu

6.5 Performing autotest sequences

An autotest can be started from any of the **Autotest** menus by following simple procedures:

- In **Autotest shortcut** menu, select the test sequence to be executed by code (see 6.1.1 *Selecting the autotest shortcut sequence*).
- In **Autotest custom** menu, select the test sequence to be executed (see 6.2 *Autotest custom*).
- In **Project autotest** menu, select the test sequence to be executed by device number (see 6.3.1 *Selecting a project autotest*).

Press the START key to start the autotest sequence.

Note:

- Autotest procedure can be early concluded or with particular functions skipped in case that any of previous function was skipped or got bad result. Reason is safety for operator and DUT. In this case the instrument still enables testing with functions without mains voltage applied to the DUT.

6.5.1 Visual inspection


A thorough visual check must be carried out before each electrical safety test.

Following items should be checked:

- Inspection of DUT for sign of damage.
- Inspection of flexible supply cable for damage.
- Any signs of pollution, moisture, dirt that can jeopardize safety. Especially openings, air filters, protection covers and barriers must be checked!
- Are there signs of corrosion?
- Are there signs of overheating?
- Inscriptions and marking related to safety must be clearly readable.
- Installation of the DUT must be performed according to the user manuals.
- During visual inspection the measuring points for the electrical testing have to be determined too.

If the visual test passes, the instrument automatically proceeds with the next test in the sequence.

If the visual test fails the user must evaluate if it is safe to proceed with the measurements.

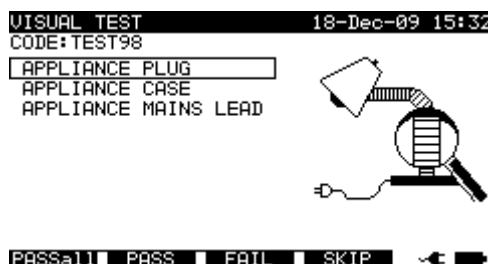

Visual test menu

Keys

PASSall (F1)	Confirms that the complete visual inspection passed.
PASS (F2)	Confirms that the visual inspection passed.
FAIL (F3)	Ends the autotest sequence.
SKIP (F4)	Skips visual test.


6.5.2 Earth bond resistance measurement

Measurement is described in chapter 5.2.1 *Earth bond resistance*.

If the earth bond resistance measurement passes, the instrument automatically proceeds with the next test in the sequence (in single measurement mode only).

The autotest sequence stops and a prompt will appear on the screen in the following cases:

- If the earth bond test fails,
- If the earth bond test is set to continuous mode,
- If the next test is insulation resistance – S probe or substitute leakage current – S probe,
- If mains voltage is required to perform the next test in autotest sequence (except Polarity test).

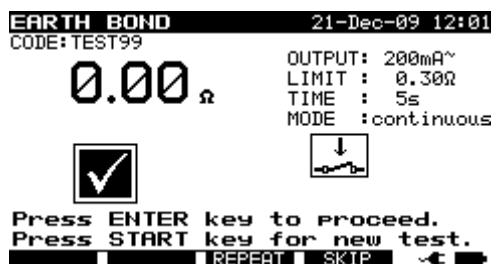

Earth bond menu

Keys

START	Starts the earth bond resistance measurement.
	Proceeds with the next earth bond resistance measurement (in continuous mode).
	Proceeds to the next autotest sequence measurement (in single measurement mode only).
ENTER	Proceeds to the next autotest sequence measurement (in continuous measurement mode only).
REPEAT (F3)	Repeats the earth bond resistance measurement.
SKIP (F4)	Skips earth bond resistance measurement.

Note:

- When polarity test is enabled in autotest sequence then earth bond resistance is performed between IEC test connector (PE terminal) and test socket (PE terminal). If polarity test is disabled in autotest sequence, earth bond test is performed between EB/S test probe and test socket (PE terminal).


6.5.3 Insulation resistance measurement

Measurement is described in chapter 5.2.2 *Insulation resistance*.

If the insulation resistance measurement and all previous tests pass (except visual test), the instrument will automatically proceed with the next test (in single measurement mode only).

The autotest sequence stops and a prompt will appear on the screen in the following cases:

- If the insulation test fails,
- if the insulation test is set to continuous mode,
- if the next test is insulation resistance – S probe or substitute leakage current – S probe,
- If mains voltage is required to perform the next test in autotest sequence (except active polarity test).

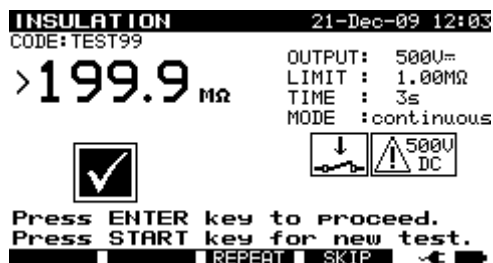

Insulation resistance menu

Keys

START

Starts the insulation resistance measurement.

Proceeds with the next insulation resistance measurement (in continuous mode).

Proceeds to the next autotest sequence measurement (in single measurement mode only).

ENTER

Proceeds to the next autotest sequence measurement (in continuous measurement mode only).

REPEAT (F3)

Repeats the insulation resistance measurement.

SKIP (F4)

Skips insulation resistance measurement.

6.5.4 Insulation resistance – S probe measurement

Measurement is described in chapter 5.2.3 *Insulation resistance-S*.

The autotest sequence stops after performing the insulation resistance measurement and a prompt will appear on the screen.



Insulation resistance - S menu

Keys

START

Starts the Insulation resistance – S probe measurement.

Proceeds with the next insulation resistance measurement (in continuous mode).

Proceeds to the next autotest sequence measurement (in single measurement mode only).

ENTER

Proceeds to the next autotest sequence measurement (in continuous measurement mode only).

REPEAT (F3)

Repeats the insulation resistance – S probe measurement.

SKIP (F4)

Skips insulation resistance – S probe measurement.

6.5.5 Substitute leakage current measurement

Measurement is described in chapter 5.2.4 *Substitute leakage current*.

The autotest sequence stops after performing a substitute leakage current measurement and a prompt will appear on the screen, except if polarity test is the next test in autotest sequence.

The autotest sequence stops and a prompt will appear on the screen in the following cases:

- If the substitute leakage current measurement fails,
- if the substitute leakage current measurement is set to continuous mode,
- if the next test is substitute leakage current – S probe,
- If mains voltage is required to perform the next test in autotest sequence (except Polarity test).



Substitute leakage test menu

Keys:

START	Starts the substitute leakage current measurement. Proceeds with the next substitute leakage current measurement (in continuous measurement mode only). Proceeds to the next autotest sequence measurement (in single measurement mode only).
ENTER	Proceeds to the next autotest sequence measurement (in continuous measurement mode only).
REPEAT (F3)	Repeats the substitute leakage current measurement.
SKIP (F4)	Skip substitute leakage current measurement.

6.5.6 Substitute leakage – S probe measurement

Measurement is described in chapter 5.2.5 *Substitute leakage – S probe*.

The autotest sequence stops after performing a substitute leakage current – S probe measurement and a prompt will appear on the screen.

```

SUB LEAKAGE PROBE 21-Dec-09 12:05
CODE: TEST99
0.02 mA          OUTPUT: 480V~
                  LIMIT : 1.00mA
                  TIME  : 3s
                  MODE  : continuous
                  [✓]          [↓]
Press ENTER key to proceed.
Press START key for new test.
REPEAT  SKIP  ←

```

Substitute leakage - S test menu

Keys:

START	Starts the Substitute leakage current – S probe measurement. Proceeds with the next substitute leakage current – S probe measurement (in continuous measurement mode only). Proceed to the next autotest sequence measurement (in single measurement mode only).
ENTER	Proceeds to the next autotest sequence measurement (in continuous measurement mode only).
REPEAT (F3)	Repeats the substitute leakage current – S probe measurement.
SKIP (F4)	Skips substitute leakage current – S probe measurement.

6.5.7 Differential leakage current

Measurement is described in chapter 5.2.6 *Differential leakage current*.

If any of previous tests fail (except visual test) or were skipped in selected autotest sequence, the differential leakage measurement will be prohibited from operating.

The autotest sequence stops after performing a differential leakage current measurement and a prompt will appear on the screen.



Leakage current test menu

Keys:

START

Starts the leakage current measurement.

Proceeds with the next leakage current measurement (in continuous measurement mode only).

Proceed to the next autotest sequence measurement (in single measurement mode only).

ENTER

Proceeds to the next autotest sequence measurement (in continuous measurement mode only).

REPEAT (F3)

Repeats the leakage current measurement.

SKIP (F4)

Skips leakage current measurement.

6.5.8 Touch leakage current measurement

Measurement is described in chapter 5.2.7 *Touch leakage current*.

If any of previous tests fail (except visual test) or were skipped in selected autotest sequence, the touch leakage measurement will be prohibited from operating.

The autotest sequence stops after performing a touch leakage current measurement and a prompt will appear on the screen.



Touch leakage test menu

Keys:

START

Starts the touch leakage current measurement.

Proceeds with the next touch leakage current measurement (in continuous measurement mode only).

Proceed to the next autotest sequence measurement (in single measurement mode only).

ENTER

Proceeds to the next autotest sequence measurement (in continuous


measurement mode only).
REPEAT (F3) Repeats the touch leakage current measurement.
SKIP (F4) Skips touch leakage current measurement.

6.5.9 Polarity test

Measurement is described in chapter 5.2.8 *Polarity test*.

If any of previous tests fail (except visual test) or were skipped in selected autotest sequence, the polarity test will be prohibited from operating.

The autotest sequence stops after performing a polarity test and a prompt will appear on the screen.

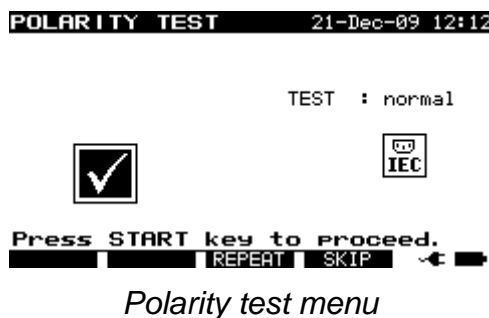

Keys:


START	Starts the polarity test. Proceed to the next autotest sequence measurement.
REPEAT (F3)	Repeats the polarity test.
SKIP (F4)	Skips polarity test.

6.5.10 TRMS current measurement using clamp current adapter

Measurement is described in chapter 5.2.9 *Clamp current measurement*.

If any of previous tests fail (except visual test) or were skipped in selected autotest sequence, the TRMS current measurement will be prohibited from operating.

The autotest sequence stops after performing a TRMS current measurement and a prompt will appear on the screen.

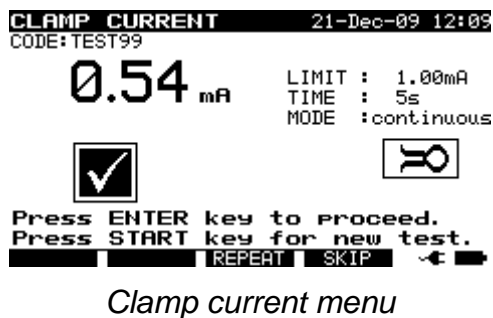

Keys:

START Starts the TRMS current measurement.
 Proceeds with the next TRMS current measurement (in continuous

	measurement mode only).
	Proceeds to the next autotest sequence measurement (in single measurement mode only).
ENTER	Proceeds to the next autotest sequence measurement (in continuous measurement mode only).
REPEAT (F3)	Repeats the TRMS current measurement.
SKIP (F4)	Skips TRMS current measurement.

6.5.11 RCD/PRCD test

Measurement is described in chapter 5.2.10 *RCD/PRCD test*.

If any of previous tests fail (except visual test) or were skipped in selected autotest sequence, the RCD / PRCD test will be prohibited from operating.

The autotest sequence stops after performing a RCD / PRCD test and a prompt will appear on the screen.

```

RCD TEST                               21-Dec-09 12:14
CODE: TEST99
      34 ms
Iah x1 0°    25 ms
Iah x1 180°  34 ms
Test : PRCD
Idn  : 30mA
Multi: x1
Phase: 0°,180°
MODE : single

Press START key to proceed.
REPEAT  SKIP
  
```

RCD test menu

Keys:

START	Starts the RCD test.
	Proceeds to the next autotest sequence measurement.
REPEAT (F3)	Repeats the RCD test.
SKIP (F4)	Skips the RCD test.

6.5.12 Power/ Functional test

The main objective of this test is to verify correct operation of the DUT.

Especially items relevant for safety should be checked:

- All main operating modes. Testing power during this check is useful.
- Mechanical operation (motors, rotating parts)
- Safety relevant functions (alarms, switches etc)

A PASS/ FAIL ticker can be committed manually.

The power measurement can be carried out optionally and is stored too. The Power measurement is described in chapter 5.2.11 *Power / Functional test*.

If any of previous tests fail (except visual test) or were skipped in selected autotest sequence, the Power / functional test will be prohibited from operating.

The autotest sequence stops after performing a Power / functional test and a prompt will appear on the screen.

```
FUNCTIONAL TEST      21-Dec-09 12:16
CODE: TEST99
      0.06 kVA      OUTPUT: 230U~
      TIME : 5s
Time: 0s
MECHANICAL OPERATION
ELECTRICAL OPERATION
SAFETY RELEVANT FUNCTIONS
PASS FAIL REPEAT SKIP ←
```

Power / Functional test

Keys:

- | | |
|--------------------|--|
| START | Starts the POWER test (optional).
Proceeds to the next autotest sequence measurement. |
| PASS (F1) | Commits a manual ticker and ends autotest. |
| FAIL (F2) | Commits a manual ticker and ends the autotest sequence. |
| REPEAT (F3) | Repeats the functional / power test. |
| SKIP(F4) | Skips the Power/ Functional test. |

7 Working with autotest results

After the autotest sequence is completed, measurement results can be:

- Saved to the flash memory of the instrument. Before that they can be viewed and edited. Refer to chapter 7.1 *Saving autotest results* for more information.
- Send to PC or a test report can be printed out to serial printer. Refer to chapter 7.4 *Downloading and printing results* for more information.
- DUT label can be printed out. Refer to chapter 7.4 *Downloading and printing results* for more information.

7.1 Saving autotest results

After the autotest sequence is completed, **Save results** menu is displayed.

Following data can be added to the test results for saving:

- Device number and its name
- Test site and location,
- Retest period,
- Repairing code,
- Comments.

21-Dec-09 15:20	22-Dec-09 14:33
DEVICE No.: MA4808A	DEVICE No.: MA4808B
TEST SITE: DEVELOPMENT	TEST SITE: DEVELOPMENT
LOCATION: ROOM NORTH	LOCATION: ROOM NORTH
USER: USER 1	USER: USER 1
DEVICE NAME : VARIAC	DEVICE NAME : VARIAC
RETEST PERIOD : 2	RETEST PERIOD : 2
REPAIRING CODE: 1	REPAIRING CODE: 12345678AAAAAAA
COMMENTS: OK	COMMENTS: OK

Save results menus

Keys:

▼ / ▲	Select the item.
◀ / ▶, alphanumeric	Edit data
SAVE (F1)	Saves test results and returns to last autotest menu.
UNDO (F2)	Undo changes.
VIEW (F3)	Views test results, see 6.3.3 <i>Comparison of results</i>
LIST (F4)	Offers predefined names for selected field.
ESC	Returns to Main menu.

Entry fields for tested device data:

Field	Length*	Note
DEVICE No.	10N	Numeric code of device. It can also be entered via barcode reader scanning, see chapter 6.4 <i>Working with barcode reader</i> .
Test site	15ASN	Name of test site. Can also be selected from the list of 100 predefined names. 4.2.5.3 <i>Test sites submenu</i> .
Location	15ASN	Name of location. Can also be selected from the list of 100 predefined names. 4.2.5.4 <i>Locations submenu</i> .

DEVICE NAME	15ASN	Name of tested device. Can also be selected from the list of 100 predefined names, see 4.2.5.2 <i>Devices submenu</i> .
Retest period	2N	Period to retest in months
Repairing code	20ASN	
Comments	25ASN	

* Length is defined as:

N numerals (numeric characters),

ASN alpha-numeric or special characters.

All parameters added to the autotest results have, in general, a possibility to be replicated or default set to blank when saving new autotest results. Device number can also be automatically incremented when new autotest sequence is finished.


For detailed description refer to chapter 4.2.8.6 *Instrument settings*.

Notes:

- The date and time are automatically attached to the saved results.
- The autotest results cannot be stored if the Device no. field is empty.
- User** field cannot be edited (this must be selected from the *User/ Device data menu* of the instrument).

7.2 Recalling results

Select **Recall/delete/send memory** in **Main** menu by using \blacktriangle and \blacktriangledown keys and press ENTER key to confirm. **Search results** menu is displayed.

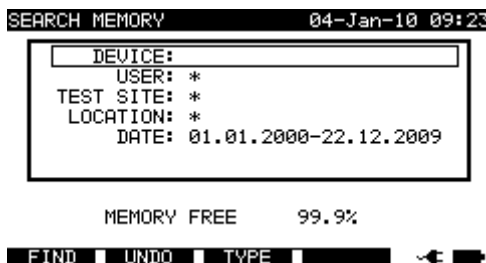

Search results menus

When searching for stored results the following filters can be used to narrow the hits:

- DUT number
- Test site,
- Location,
- Date from and date to,
- User.

By using \blacktriangle and \blacktriangledown cursor keys select the filter you want to edit.

Keys:


▼ / ▲	Select parameter line.
◀ / ▶, Alphanumeric	Edit parameter line.
F1 (FIND)	Starts search after filters are setup correctly.
F2 (UNDO)	Undo latest change.
F3 (TYPE)	Selects parameter line type.
ESC	Returns to Main menu.

Notes

- To change the selected parameter line type, press the F3 function key and the »parameter type« will become highlighted (e.g. DEVICE). The cursor keys ◀ and ▶ can then be used to change the parameter type and by pressing **ENTER** key the choice can be confirmed. Once the parameter types have been set up, the data required to filter the results can be inserted. Filter information can be inserted via the alphanumeric keypad or, in some filter fields such as user, can also be selected from a predefined list by pressing the F4 function key. The device number field can also be read using a barcode reader, see chapter 6.4 *Working with barcode reader*.
- By placing a »*« (shift + “2”) in a particular field, tells the instrument not to search the associated filter field. When searching, the instrument will therefore ignore data in this parameter and go on to find all the DUTs that conform to data placed in the other filter fields.
- To find all stored results, enter »*« in the all fields (excluding DATE where the correct from and to dates must be entered).

When the search filters have been correctly set up, a search can be performed by pressing the **F1** function key. If the search filters are set up correctly and the DUTs exist in the units memory, the **Recall results** menu will be displayed.


While recalling stored results, the instrument shows a bargraph and a ratio of files found compared to files stored in memory (e.g. 7/11 implies 7 results have been found to meet the filter criteria out of a potential 11 results stored in the flash memory).

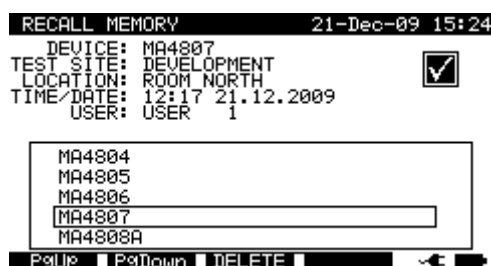

Recall memory menu

Once the DUTs have been found, the ▲ and ▼ cursor keys and **F1** and **F2** function keys can be used to scroll through the list of DUTs.

More information relating to a DUT can be viewed by pressing the **ENTER** key on the appropriate DUT. The information can be scrolled using the **F1** and **F2** function keys.

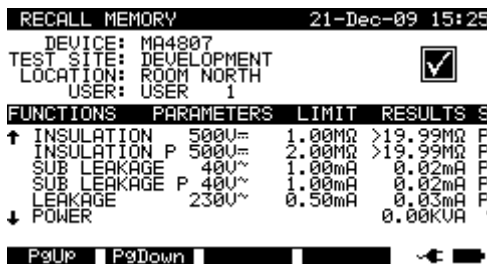

View results menu


Use the **ESC** key to return to **Recall memory** or **Search memory** menus. From the **Recall memory** menu stored data can be downloaded to a PC, printed out to a serial printer or deleted from the memory. Refer to chapters 7.4 *Downloading and printing results* and 7.3 *Deleting results*, respectively.

7.3 Deleting results

Stored autotest results can also be deleted from the memory.

Enter **Recall/delete/send memory** menu. Recall the result(s) you want to delete (Refer to chapter 7.2 *Recalling results* for detailed information on recalling results). In the **Recall memory** menu, press the **F3** function key. **Delete** menu will be displayed. In this menu the following functions can be performed.

- DELETE: Deletes the single file last highlighted when the **F3** function key was pressed,
- DELETE SELECTED: Deletes all the files found from searching the memory of the instrument,
- DELETE ALL: Clears all stored test data from the instrument.

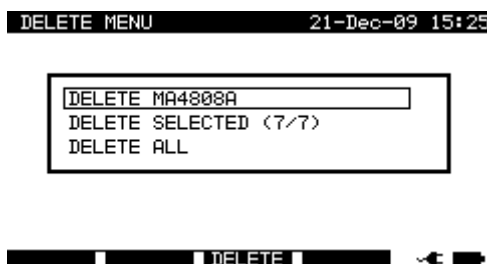

Delete results menu

Keys:

▼ / ▲	Select deleting option.
DELETE (F3)	Deletes selected results.
ESC	Returns to memory recall menu.

Confirm the delete activity by using **Y** key. After performing the selected option, instrument returns to **Recall memory** menu accepting the new memory state. If you

don't want to delete the results, press the N key in **Delete** menu. Instrument returns to **Recall memory** menu without any changes.

7.4 Downloading and printing results

The instrument offers the following possibilities to send selected result or selection to:


- PC (to store and later operations on stored results),
- Serial printer for fast report printing, and
- Label printer.

It is possible to send data to selected output after:


- Autotest sequence is completed, or
- Recalling stored results from the instrument memory.

Refer to chapter 4.2.8.8 *Communication settings* for printing results using Bluetooth technology (optional).


By pressing the **SEND** function key in the **Save results** or **Recall memory** menus, **Send results** menu is available.

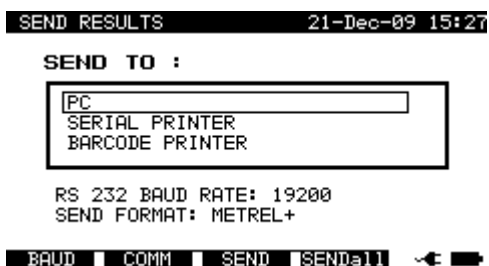

Send to PC

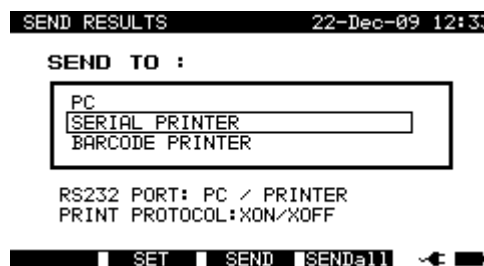

Send to serial printer

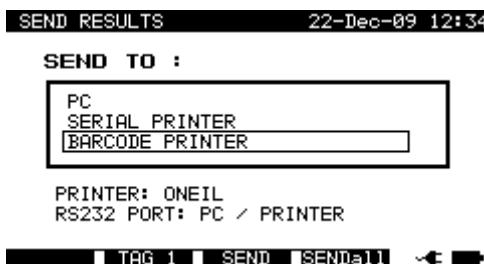

Send to barcode printer


Send results menus

Keys:

▼ / ▲	Select activity.
ESC	Returns to memory recall menu.
SEND (F3)	Sends only selected result to the selected device.
SENDall (F4)	Sends filtered results (see 7.2 <i>Recalling results</i>) to the selected device.
Send to PC	

BAUD (F1)	Opens menu for selection of Baud Rate, see 4.2.8.7 <i>Communication settings</i> .
COMM (F2)	Opens menu for interface selection (RS232, USB or Bluetooth), see 4.2.8.7 <i>Communication settings</i> .
Send to serial printer	
SET (F2)	Selects serial printer data transfer handshake control.
Send to barcode printer	
TAG1 (F2) or	Generates one or two printed labels per stored result, e.g. for appliance only (TAG1) or for appliance plus its power supply cord (TAG2).
TAG2 (F2)	

Send to serial printer

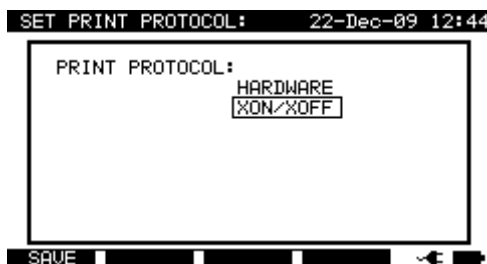

Serial printer data transfer handshake control.

Keys:

▼ / ▲	Select the option.
SAVE (F1)	Accepts selected option.
ESC	Returns to <i>Send results</i> menu.

```

.....
METREL
Testing Laboratory
Horjul, Slovenia
.....

APPLIANCE          11072010
TEST SITE          METREL
LOCATION            OFFICE 1
TIME/DATE          09:31 11-JUL-2008
USER               TOMAZ
RESULT:            PASS
-----
VISUAL              PASS
EARTH BOND It: 10A~ Rlim: 0.10 Ohm
1. R =             0.03 Ohm PASS
INSULATION Ut: 500V Rlim: 1.00 MOhm
1. R =             178.9 MOhm PASS
LEAKAGE Ut: 230V~ Ilim: 0.75 mA
1. I =             0.23 mA PASS
POWER
1. P =             2.01KVA PASS
APPLIANCE NAME: APP 1
RETEST PERIOD : 11/07/2009
REPAIRING CODE: 021268505
COMMENTS: -
=====
END OF DATA
    
```


Example of data sent to serial printer

Notes:

- When working with serial printers, the baud rate is set by default to 9600 bps.
- Software transfer control uses XON (CTRL-Q) and XOFF (CTRL-S) characters.
- Hardware transfer control uses DTR line.

7.4.1 Send to barcode printer

Refer to chapter 4.2.8.6 *Instrument settings* and **Appendix B** for detailed information about barcode systems used when printing barcode labels.

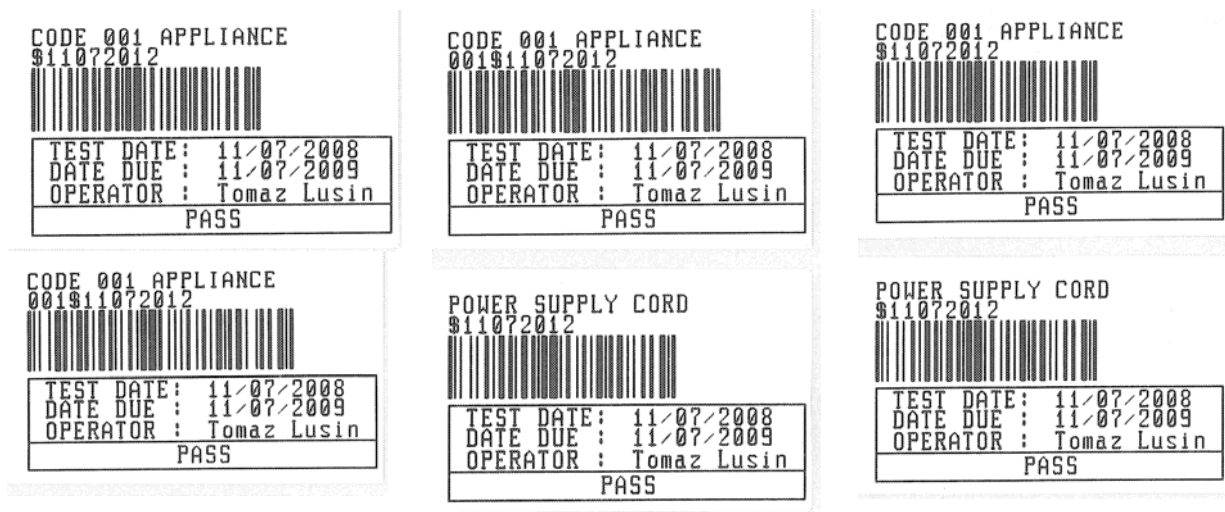

1 tag, barcode system: single (top label)
 1 tag, barcode system: double (bottom label)

2 tags, barcode system: double

2 tags, barcode system: single

Examples of DUT labels

7.5 Data upload / download

Autotests and results from PC software can be uploaded to the instrument from the **Data upload / download** menu. Also the following items can be downloaded and edited or created with PC software and then uploaded onto the instrument:

- Users,
- DUTs,
- Test sites,
- Locations



Downloading / uploading test data menu

During the data transfer from the PC to the instrument, the transfer status will be displayed.

Pressing ESC key instrument returns to **Main** menu.

For detailed information on data uploading / downloading refer to help menus of PC software PATLink PRO.

8 Maintenance

8.1 Periodic calibration

It is essential that all measuring instruments are regularly calibrated in order for the technical specification listed in this manual to be guaranteed. We recommend an annual calibration. The calibration should be done by an authorized technical person only.

8.2 Fuses

There are two fuses available from left side connector panel:

F1 = F2 = T 16 A / 250 V (32 × 6.3 mm): intended for instrument protection.

If the instrument does not respond after connection to mains supply, disconnect the mains supply and accessories and then check these fuses. For position of fuses refer to chapter 2.2 *Connector panel*.

Warning!

- Switch off the instrument and disconnect all test accessories and mains cord before replacing the fuses or opening the instrument.**
- Replace blown fuse with the same type.**

8.3 Service

For repairs under or out of warranty time please contact your distributor for further information.

Unauthorized person is not allowed to open the SigmaPAT instrument. There are no user replaceable parts inside the instrument.

8.4 Cleaning

Use a soft, slightly moistened cloth with soap water or alcohol to clean the surface of SigmaPAT instrument. Leave the instrument to dry totally before using it.

Notes:

- Do not use liquids based on petrol or hydrocarbons!
- Do not spill cleaning liquid over the instrument!

9 Instrument set and accessories

Standard set of the instrument

- › Instrument MI 3310 SigmaPAT
- › Bag for accessories
- › Mains cable
- › 3 test leads (red, green, black)
- › 3 test tips (red, green, black)
- › 3 alligator clips (red, green, black)
- › PC software PATLink PRO with RS232 and USB cables
- › Instruction manual
- › Short instruction manual
- › Declaration of conformity
- › Production verification data
- › 6 Ni-MH rechargeable accus, size C

Optional accessories

See the attached sheet for a list of optional accessories that are available on request from your distributor.

A Appendix A – Preprogrammed autotests

Autotest shortcut codes

Type	Class	Fuse	Cord	Earth Limit	Bond Out	Insulation Limit	Insulation Out	S. Leakage Limit	Leakage Limit	T. Leakage Limit	Code
Portable or Handheld		[A]		[Ω]	[A]	[MΩ]	[V]		[mA]		
		I	3	short	0.10	10	1.00	500	-	0.75	-
	I	6	short	0.10	10	1.00	500	-	0.75	-	002
	I	10	short	0.10	25	1.00	500	-	0.75	-	003
	I	13	short	0.10	25	1.00	500	-	0.75	-	004
	I	3	short	0.10	10	1.00	500	-	-	-	005
	I	6	short	0.10	10	1.00	500	-	-	-	006
	I	10	short	0.10	25	1.00	500	-	-	-	007
	I	13	short	0.10	25	1.00	500	-	-	-	008
	I	3	mid	0.30	10	1.00	500	-	0.75	-	009
	I	6	mid	0.30	10	1.00	500	-	0.75	-	010
	I	10	mid	0.30	25	1.00	500	-	0.75	-	011
	I	13	mid	0.30	25	1.00	500	-	0.75	-	012
	I	3	mid	0.30	10	1.00	500	-	-	-	013
	I	6	mid	0.30	10	1.00	500	-	-	-	014
	I	10	mid	0.30	25	1.00	500	-	-	-	015
	I	13	mid	0.30	25	1.00	500	-	-	-	016
	I	3	long	0.50	10	1.00	500	-	0.75	-	017
	I	6	long	0.50	10	1.00	500	-	0.75	-	018
	I	10	long	0.50	25	1.00	500	-	0.75	-	019
	I	13	long	0.50	25	1.00	500	-	0.75	-	020
	I	3	long	0.50	10	1.00	500	-	-	-	021
	I	6	long	0.50	10	1.00	500	-	-	-	022
	I	10	long	0.50	25	1.00	500	-	-	-	023
	I	13	long	0.50	25	1.00	500	-	-	-	024
	II	-	-	-	-	2.00	500	-	0.25	-	025
	II	-	-	-	-	2.00	500	-	-	-	026

Autotest shortcut codes, *continued*

Type	Class	Fuse	Cord	Earth Limit	Bond Out	Insulation Limit	Insulation Out	S. Leakage Limit	Leakage Limit	T. Leakage Limit	Code
Heating and Cooking		[A]		[Ω]	[A]	[MΩ]	[V]	[mA]	[mA]		
	I	3	short	0.10	10	-	-	-	0.75	-	027
	I	6	short	0.10	10	-	-	-	1.00	-	028
	I	10	short	0.10	25	-	-	-	1.50	-	029
	I	13	short	0.10	25	-	-	-	2.25	-	030
	I	3	short	0.10	10	-	-	0.75	-	-	031
	I	6	short	0.10	10	-	-	1.00	-	-	032
	I	10	short	0.10	25	-	-	1.50	-	-	033
	I	13	short	0.10	25	-	-	2.25	-	-	034
	II	-	-	-	-	2.00	500	-	0.25	-	035
	II	-	-	-	-	2.00	500	-	-	-	036

Type	Class	Fuse	Cord	Earth Limit	Bond Out	Insulation Limit	Insulation Out	S. Leakage Limit	Leakage Limit	T. Leakage Limit	Code
IT equipment EN 60950				[Ω]	[mA]	[MΩ]	[V]	[mA]			
	I	-	short	0.10	100	1.00	500	3.5	-	-	037
	I	-	midd	0.30	100	1.00	500	3.5	-	-	038
	I	-	long	0.50	100	1.00	500	3.5	-	-	039

Type	Class	Fuse	Cord	Earth Limit	Bond Out	Insulation Limit	Insulation Out	S. Leakage Limit	Leakage Limit	T. Leakage Limit	Code
IT equipment EN 60950 – 250				[Ω]	[mA]	[MΩ]	[V]	[mA]			
	I	-	long	0.50	100	1.00	250	3.5	-	-	040

Type	Class	Fuse	Cord	Earth Limit	Bond Out	Insulation Limit	Insulation Out	S. Leakage Limit	Leakage Limit	T. Leakage Limit	Code
OTHER		[A]		[Ω]	[A]	[MΩ]	[V]	[mA]	[mA]		
	I	3	short	0.10	10	1.00	500	-	3.50	-	041
	I	6	short	0.10	10	1.00	500	-	3.50	-	042
	I	10	short	0.10	25A	1.00	500	-	3.50	-	043
	I	13	short	0.10	25	1.00	500	-	3.50	-	044
	I	3	short	0.10	10	1.00	500	-	-	-	045
	I	6	short	0.10	10	1.00	500	-	-	-	046
	I	10	short	0.10	25	1.00	500	-	-	-	047
	I	13	short	0.10	25	1.00	500	-	-	-	048
	I	3	midd	0.30	10	1.00	500	-	3.50	-	049
	I	6	midd	0.30	10	1.00	500	-	3.50	-	050
	I	10	midd	0.30	25	1.00	500	-	3.50	-	051
	I	13	midd	0.30	25	1.00	500	-	3.50	-	052
	I	3	midd	0.30	10	1.00	500	-	-	-	053
	I	6	midd	0.30	10	1.00	500	-	-	-	054
	I	10	midd	0.30	25	1.00	500	-	-	-	055

	I	13	midd	0.30	25	1.00	500	-	-	-	056
	I	3	long	0.50	10	1.00	500	-	3.50	-	057
	I	6	long	0.50	10	1.00	500	-	3.50	-	058
	I	10	long	0.50	25	1.00	500	-	3.50	-	059
	I	13	long	0.50	25	1.00	500	-	3.50	-	060
	I	3	long	0.50	10	1.00	500	-	-	-	061
	I	6	long	0.50	10	1.00	500	-	-	-	062
	I	10	long	0.50	25	1.00	500	-	-	-	063
	I	13	long	0.50	25	1.00	500	-	-	-	064
	II	-	-	-	-	2.00	500	-	0.25	-	065
	II	-	-	-	-	2.00	500	-	-	-	066

IEC leads Surge protected = OFF RCD protected = OFF	Length	Earth Bond		Insulation		Polarity	Code
	[m]	Limit [Ω]	Out [A]	Limit [MΩ]	Out [V]		
0.5 mm² / 3 A	<=5	0.30	10	1.00	500	✓ normal	067
	7.5	0.40	10	1.00	500	✓ normal	068
	10	0.50	10	1.00	500	✓ normal	069
	12	0.60	10	1.00	500	✓ normal	070
	15	0.70	10	1.00	500	✓ normal	071
	20	0.80	10	1.00	500	✓ normal	072
	30	1.00	10	1.00	500	✓ normal	073
	40	2.00	10	1.00	500	✓ normal	074
	50	2.00	10	1.00	500	✓ normal	075
0.75 mm² / 6 A	<=5	0.20	10	1.00	500	✓ normal	076
	7.5	0.30	10	1.00	500	✓ normal	077
	10	0.40	10	1.00	500	✓ normal	078
	12	0.40	10	1.00	500	✓ normal	079
	15	0.50	10	1.00	500	✓ normal	080
	20	0.60	10	1.00	500	✓ normal	081
	30	0.90	10	1.00	500	✓ normal	082
	40	1.00	10	1.00	500	✓ normal	083
	50	1.00	10	1.00	500	✓ normal	084
1 mm² / 10 A	<=5	0.20	25	1.00	500	✓ normal	085
	7.5	0.20	25	1.00	500	✓ normal	086
	10	0.30	25	1.00	500	✓ normal	087
	12	0.30	25	1.00	500	✓ normal	088
	15	0.40	25	1.00	500	✓ normal	089
	20	0.50	25	1.00	500	✓ normal	090
	30	0.70	25	1.00	500	✓ normal	091
	40	0.90	25	1.00	500	✓ normal	092
	50	1.00	25	1.00	500	✓ normal	093
1.25 mm² / 13 A	<=5	0.20	25	1.00	500	✓ normal	094
	7.5	0.20	25	1.00	500	✓ normal	095
	10	0.30	25	1.00	500	✓ normal	096
	12	0.30	25	1.00	500	✓ normal	097

1.5 mm² / 15 A	<=5	0.20	25	1.00	500	✓ normal	103
	7.5	0.20	25	1.00	500	✓ normal	104
	10	0.20	25	1.00	500	✓ normal	105
	12	0.30	25	1.00	500	✓ normal	106
	15	0.30	25	1.00	500	✓ normal	107
UNKNOWN							
	<=5	0.20	25	1.00	500	✓ normal	112
	7.5	0.20	25	1.00	500	✓ normal	113
	10	0.20	25	1.00	500	✓ normal	114
	12	0.30	25	1.00	500	✓ normal	115
	15	0.30	25	1.00	500	✓ normal	116
	20	0.40	25	1.00	500	✓ normal	117
	30	0.50	25	1.00	500	✓ normal	118
	40	0.60	25	1.00	500	✓ normal	119
	50	0.80	25	1.00	500	✓ normal	120

IEC leads Surge protected = ON RCD protected = OFF	Length	Earth Bond		Insulation		Polarity	Code
	[m]	Limit [Ω]	Out [A]	Limit [MΩ]	Out [V]		
0.5 mm² / 3A	<=5	0.30	10	1.00	250	✓ normal	167
	7.5	0.40	10	1.00	250	✓ normal	168
	10	0.50	10	1.00	250	✓ normal	169
	12	0.60	10	1.00	250	✓ normal	170
	15	0.70	10	1.00	250	✓ normal	171
	20	0.80	10	1.00	250	✓ normal	172
	30	1.00	10	1.00	250	✓ normal	173
	40	2.00	10	1.00	250	✓ normal	174
	50	2.00	10	1.00	250	✓ normal	175
0.75 mm² / 6 A							
	<=5	0.20	10	1.00	250	✓ normal	176
	7.5	0.30	10	1.00	250	✓ normal	177
	10	0.40	10	1.00	250	✓ normal	178
	12	0.40	10	1.00	250	✓ normal	179
	15	0.50	10	1.00	250	✓ normal	180
	20	0.60	10	1.00	250	✓ normal	181
	30	0.90	10	1.00	250	✓ normal	182
	40	1.00	10	1.00	250	✓ normal	183
	50	1.00	10	1.00	250	✓ normal	184
1 m² / 10 A							
	<=5	0.20	25	1.00	250	✓ normal	185
	7.5	0.20	25	1.00	250	✓ normal	186
	10	0.30	25	1.00	250	✓ normal	187
	12	0.30	25	1.00	250	✓ normal	188
	15	0.40	25	1.00	250	✓ normal	189
	20	0.50	25	1.00	250	✓ normal	190
	30	0.70	25	1.00	250	✓ normal	191
	40	0.90	25	1.00	250	✓ normal	192
	50	1.00	25	1.00	250	✓ normal	193
1.25 mm² / 13 A							
	<=5	0.20	25	1.00	250	✓ normal	194
	7.5	0.20	25	1.00	250	✓ normal	195
	10	0.30	25	1.00	250	✓ normal	196
	12	0.30	25	1.00	250	✓ normal	197

1.5 mm² / 15 A	<=5	0.20	25	1.00	250	✓ normal	203
	7.5	0.20	25	1.00	250	✓ normal	204
	10	0.20	25	1.00	250	✓ normal	205
	12	0.30	25	1.00	250	✓ normal	206
	15	0.30	25	1.00	250	✓ normal	207
UNKNOWN	<=5	0.20	25	1.00	250	✓ normal	212
	7.5	0.20	25	1.00	250	✓ normal	213
	10	0.20	25	1.00	250	✓ normal	214
	12	0.30	25	1.00	250	✓ normal	215
	15	0.30	25	1.00	250	✓ normal	216
	20	0.40	25	1.00	250	✓ normal	217
	30	0.50	25	1.00	250	✓ normal	218
	40	0.60	25	1.00	250	✓ normal	219
	50	0.80	25	1.00	250	✓ normal	220

IEC leads RCD protected = ON	Length	Earth Bond		Leakage	RCD	Polarity	Code
	[m]	Limit [Ω]	Out [A]	Limit [mA]			
0.5 mm² / 3 A	<=5	0.30	10	0.75	30mA Auto	✓ active	267
	7.5	0.40	10	0.75	30mA Auto	✓ active	268
	10	0.50	10	0.75	30mA Auto	✓ active	269
	12	0.60	10	0.75	30mA Auto	✓ active	270
	15	0.70	10	0.75	30mA Auto	✓ active	271
	20	0.80	10	0.75	30mA Auto	✓ active	272
	30	1.00	10	0.75	30mA Auto	✓ active	273
	40	2.00	10	0.75	30mA Auto	✓ active	274
	50	2.00	10	0.75	30mA Auto	✓ active	275
0.75 mm² / 6 A	<=5	0.20	10	0.75	30mA Auto	✓ active	276
	7.5	0.30	10	0.75	30mA Auto	✓ active	277
	10	0.40	10	0.75	30mA Auto	✓ active	278
	12	0.40	10	0.75	30mA Auto	✓ active	279
	15	0.50	10	0.75	30mA Auto	✓ active	280
	20	0.60	10	0.75	30mA Auto	✓ active	281
	30	0.90	10	0.75	30mA Auto	✓ active	282

	40	1.00	10	0.75	30mA Auto	✓ active	283
	50	1.00	10	0.75	30mA Auto	✓ active	284
1 mm²/ 10 A	<=5	0.20	25	0.75	30mA Auto	✓ active	285
	7.5	0.20	25	0.75	30mA Auto	✓ active	286
	10	0.30	25	0.75	30mA Auto	✓ active	287
	12	0.30	25	0.75	30mA Auto	✓ active	288
	15	0.40	25	0.75	30mA Auto	✓ active	289
	20	0.50	25	0.75	30mA Auto	✓ active	290
	30	0.70	25	0.75	30mA Auto	✓ active	291
	40	0.90	25	0.75	30mA Auto	✓ active	292
	50	1.00	25	0.75	30mA Auto	✓ active	293
1.25 mm²/ 13 A	<=5	0.20	25	0.75	30mA Auto	✓ active	294
	7.5	0.20	25	0.75	30mA Auto	✓ active	295
	10	0.30	25	0.75	30mA Auto	✓ active	296
	12	0.30	25	0.75	30mA Auto	✓ active	297
1.5 mm²/ 15 A	<=5	0.20	25	0.75	30mA Auto	✓ active	303
	7.5	0.20	25	0.75	30mA Auto	✓ active	304
	10	0.20	25	0.75	30mA Auto	✓ active	305
	12	0.30	25	0.75	30mA Auto	✓ active	306
	15	0.30	25	0.75	30mA Auto	✓ active	307
UNKNOWN	<=5	0.20	25	0.75	30mA Auto	✓ active	312
	7.5	0.20	25	0.75	30mA Auto	✓ active	313
	10	0.20	25	0.75	30mA Auto	✓ active	314
	12	0.30	25	0.75	30mA Auto	✓ active	315
	15	0.30	25	0.75	30mA Auto	✓ active	316

20	0.40	25	0.75	30mA Auto	✓ active	317
30	0.50	25	0.75	30mA Auto	✓ active	318
40	0.60	25	0.75	30mA Auto	✓ active	319
50	0.80	25	0.75	30mA Auto	✓ active	320

Type	Earth Bond		Leakage	RCD	Polarity	Code
Portable RCD	Limit	Out	Limit			
	[Ω]	[A]	[mA]			
	0.10	200 m	0.75	PRCD: 30mA Auto	-	400

Type	Class III equipment		Code
	Visual		
	✓		500

Meaning of symbols used in Autotest shortcut codes tables:

- ✓ Test / measurement enabled,
- Test / measurement disabled.

Note:

- When polarity test is enabled in autotest sequence then earth bond resistance is performed between IEC test connector (PE terminal) and test socket (PE terminal). If polarity test is disabled in autotest sequence, earth bond test is performed between EB/S test probe and test socket (PE terminal).

B Appendix B – Autotest shortcut codes

The instrument SigmaPAT supports two barcode formats when printing device labels.

Autotest shortcut code and DUT number

Autotest shortcut codes are represented as a three digit code. These autotest codes can also be represented by the barcode.

Using the barcode reader, the instruments can accept autotest shortcut code from barcode label.



Autotest shortcut code

Also DUT number can be read from barcode label.

Single / double barcode system

If single barcode system is selected in the instrument, only DUT name is printed out as a barcode on device barcode label.

When double barcode system is selected in the instrument, both autotest shortcut code and DUT name are printed out as a barcode on DUT barcode label.



1 tag, barcode system: single
(top label)

1 tag, barcode system: double
(bottom label)

2 tags, barcode system: double

2 tags, barcode system: single

Examples of DUT labels

001	Autotest shortcut code
\$	Separator
11072012	DUT number

Refer to chapter 4.2.8.6 *Instrument settings* for barcode system selection.

Notes:

- Special character »\$« between autotest shortcut code and DUT name (ID number) is used to distinguish shortcut code from DUT name.
- Only DUT ID is printed out on the 2nd DUT label (power supply cord label).

